

PS1350

PS1351

PS1352



Scan the QR code for
support information and
the complete user's manual



vtech[®]
User Guide

Important safety instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water (for example, near a bath tub, kitchen sink, swimming pool).
5. Do not expose the telephone to direct sunlight or extreme cold environments. Do not place the telephone close to heating sources, such as radiators, cookers, heaters, etc.
6. Do not overload mains wall outlets and extension cords as this can result in the risk of fire or electric shock.
7. Unplug this product from the wall outlet and contact the retailer or our customer service representative under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If the product does not operate normally by following the operating instructions.
 - If the product has been dropped and the cabinet has been damaged.
 - If the product exhibits a distinct change in performance.
8. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
9. Do not use the telephone to report a gas leak in the vicinity of the leak.
10. Use only the supplied NiMH (Nickel Metal Hydride) batteries. The handset talk and standby operating times stated only apply when using original fitment batteries. Batteries from other manufacturers or capacities may not achieve the times stated.
11. The use of other battery types or non-rechargeable batteries/primary cells can be dangerous. The manufacturer will not be held liable for damage or injury arising from using incorrect battery types.
12. Do not use third party charging cradles. The batteries may be damaged.
13. Please note the correct polarity while inserting the batteries.
14. Batteries must not be exposed to direct sunlight, fire or immersed in water.

15. The batteries cannot be subjected to high or low extreme temperature and low air pressure at high altitude during use, storage or transportation as this may result in an explosion or the leakage of flammable liquid or gas. Disposal of batteries into fire or a hot oven, or mechanically crushing or cutting them can also result in an explosion.



Use only adaptors and batteries listed below.

- Jiangxi Jian Aohai Technology Co., Ltd.
Model: A318-060045W-EU1 |
A318-060045W-UK1.
VTech Telecommunications Limited.
Model: VT05EEU06045 | VT05EUK06045.
- Use only the supplied batteries:
Yi Yang Corun Battery Co., Ltd.
Model: Ni-MH AAA850mAh 1.2V;
GPI International Ltd.
Model: VTRHCH83C109;
Shenzhen Highpower Technology Co., Ltd.
Model: HFR-AAA850.

Disposal of Old Equipment and Batteries (WEEE)

Only for European Union and countries with recycling systems

These symbols (a, b) on the products, ^{a)} packaging, and/or accompanying documents mean that used electrical and electronic products and batteries must not be mixed with general household waste. For proper treatment, recovery and recycling of old products and batteries, please take them to applicable collection points in accordance with your national legislation.



By disposing of them correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment.

For more information about collection and recycling, please contact your local authority. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

Product disposal instructions for business users

If you wish to discard electrical and electronic equipment, please contact your local authorities or dealer for further information.

Information on Disposal in other countries outside the European Union

These symbols (a, b) are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

Note for the battery symbol

This symbol (b) might be used in combination with

a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

Recycle your device (WEEE directive 2012/19/EU)

The WEEE logo appears on the product to indicate that this product must not be disposed off or discarded with other household waste. You are responsible for the correct disposal of your electronic and electrical waste equipment in accordance with your local authority regulations on the recycling of hazardous waste.

Approval and conformity

This product is intended for use within Europe and the UK. This equipment complies with the essential requirements of the EU Radio Equipment Directive (2014/53/EU) and the UK Radio Regulations 2017 on radio systems and telecommunication equipment.

VTech Telecommunication Ltd. hereby declares that this telephone PS1350/PS1351/PS1352 complies with the essential requirements and other relevant provisions of EU Radio Equipment Directive (2014/53/EU) and the UK Radio Equipment Regulations 2017.

The declaration of conformity may be viewed at www.vtechphones.eu.

The **CE** symbol confirms the conformity of the telephone and the above directive.



Importer: VTech Electronics Europe Plc.

Napier Court, Abingdon Science Park, Abingdon, Oxfordshire, OX14 3YT.

Manufacturer: VTech Telecommunications Ltd.

23/F, Tai Ping Industrial Centre, Block 1, 57 Ting Kok Road, Tai Po, Hong Kong.

Operating condition	Power consumption
Off mode	<1 W
Network standby mode	<1 W

Customer Service and Product Warranty

IMPORTANT

Please retain this guide with your sales receipt as proof of the date of purchase.

Customer Service

Please call our Customer Services Department at 0330 678 1988 or email to service-ukphone@vtechphones.eu and a service representative will be happy to help you.



PRODUCT WARRANTY

Thank you for choosing this quality product from VTech.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase.
3. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
4. This warranty is personal to the original purchaser and is not transferable.
5. Breakages to the LCD screen are not covered by the warranty.

VTech Electronics Europe Plc, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Ireland only. For products purchased outside the UK and Ireland, please contact your local distributor or place of purchase.

 
Table of contents

Install the battery	6
Connect the base/charger	6
Charge the battery	7
Overview	8
Handset	8
Telephone base	11
Display icons	12
Events summary	14
Use the handset keys.....	14
Access the menu.....	14
Switch on / off the handset.....	15
Lock / unlock the handset keypad	15
Enter texts	15
Character chart	16
Menu options	16
Initial setup.....	17
Basic settings.....	18
Set menu mode	18
Set display language	18
Set date & time.....	18
Set auto answer	19
Set brightness.....	19
Operate.....	20
Make a call.....	20
Answer a call	20
End a call	20
Volume up / down	20
Volume booster	21
Mute a call	21
Call waiting.....	21

 
Call list	22
View a call history	22
Dial from a call history	22
Delete call history	23
Add a call history to phonebook.....	23
View outgoing call list entries.....	23
Dial an outgoing list entry	23
Phonebook	24
Store a number to phonebook	24
View the phonebook entries.....	24
Search a contact	24
Dial a phonebook entry.....	25
Edit a phonebook entry.....	25
Delete phonebook entries.....	25
Speed dial	26
Store a speed dial number.....	26
Dial a speed dial number	26
Edit a speed dial number.....	26
Delete a speed dial number	27
Multiple handset use (For PS1351/PS1352 only)	28
Make an internal call.....	28
Answer an internal call	28
Call transfer / conference call	28
Nuisance and unwanted call blocker.....	29
Add a number to black list	29
View the black list entries	29
Edit a black list entry.....	29
Delete a black list entries.....	30
Block unknown calls	30
Set block call type.....	31

Answering machine (TAM)	32
Turn Answering Machine (TAM) on / off.....	32
Set answer mode	32
Play message	33
Options during message playback.....	33
Delete all messages.....	34
Save a number in message list.....	34
Announcement - record / playback / reset	35
Set answering machine language.....	35
Set answer delay	36
Set recording length	36
Set call screening on / off.....	37
Set remote access on / off.....	37
Record a memo	38
Other settings	38
Set screen saver.....	38
Set ringer - internal / external calls	39
Set ringer volume	39
Set voicemail number	39
Tone - set key tone on / off.....	40
Tone - set alert tones on / off	40
Alarm - set / stop	41
Set LCD backlight.....	42
Rename handset	42
Telephon base settings	43
Set base ringtone volume	43
Set dialling prefix.....	43
Change PIN.....	43
Register a handset	44
Reset handset / base.....	45

 
 
Connect the base/charger

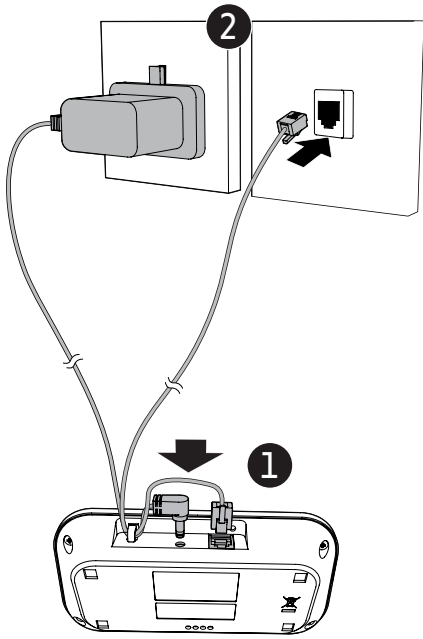

 
PS1351 - 1 charger
PS1352 - 2 chargers

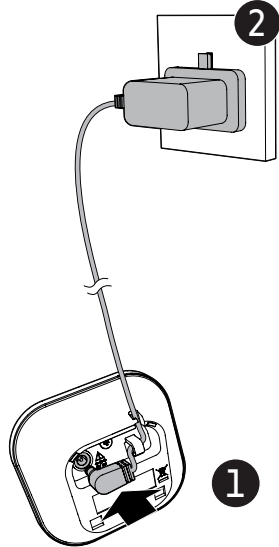

 
Install the battery

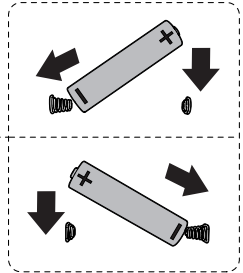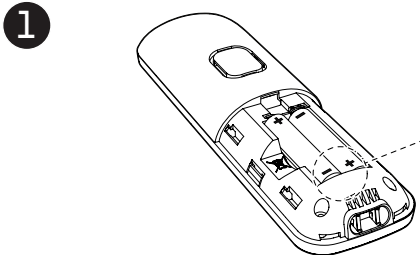

2

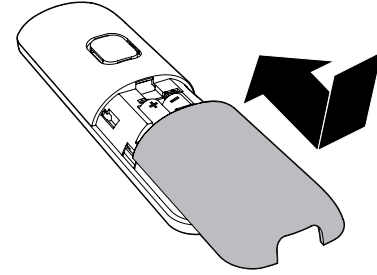

3

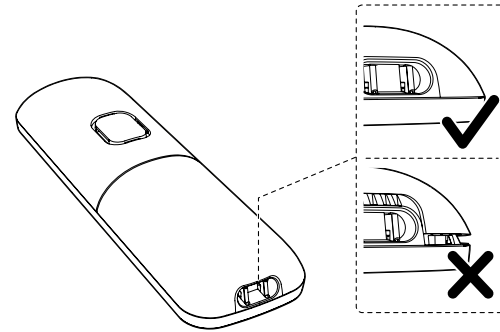 


Charge the battery

Place the handset in the telephone base or charger to charge. The handset beeps and begins charging. The battery icon animates while charging.

 
Initial charging time: 12 hours

NOTE: When the battery is low, the handset emits an alert tone every 2 seconds.

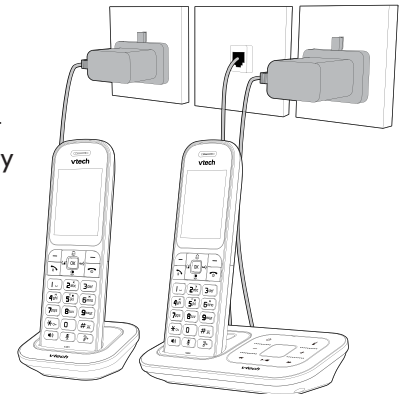

Overview

 
HANDSET

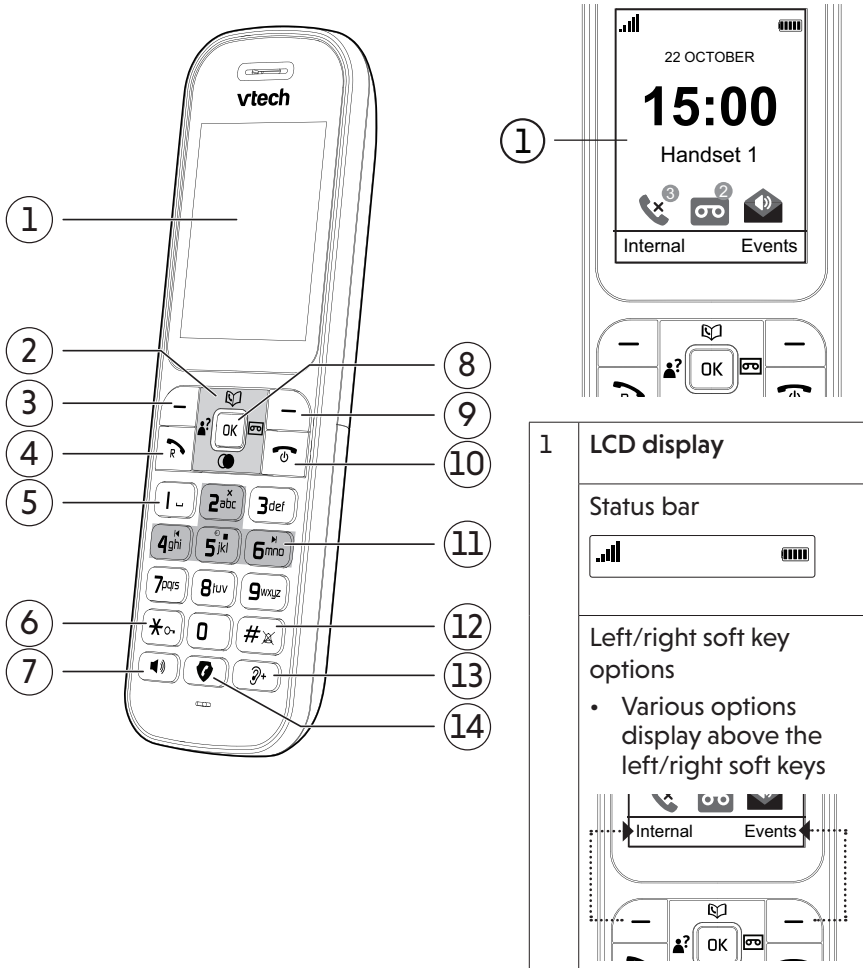

2		<ul style="list-style-type: none"> Press to review the call list when the telephone is not in use. While entering names or numbers, press to move the cursor to the left. Toggle among different settings while in menu selections.
		<ul style="list-style-type: none"> Press to review the phonebook when the telephone is not in use. Press to scroll up while in a menu or reviewing the phonebook, call list, black list or redial list. Press to increase the listening volume when on a call, or increase the message playback volume.
		<ul style="list-style-type: none"> When the telephone is not in use, press to access the messages on your answering machine. While entering names or numbers, press to move the cursor to the right. Toggle among different settings while in menu selections.
		<ul style="list-style-type: none"> Press to review the redial list when the telephone is not in use. Press to scroll down while in a menu or reviewing the phonebook, call list, black list or redial list. Press to decrease the listening volume when on a call, or decrease the message playback volume.
3		<p>Left soft key</p> <ul style="list-style-type: none"> Press to select the option displayed above the key.
4		<ul style="list-style-type: none"> Press to make or answer a call using the handset. Press to activate Recall for use with Telephone Network Services such as Call Waiting during a call.
5		Enter space character during text editing.
6		<u>Press and hold</u> to lock or unlock the keypad.
7		Press to turn on the handset speakerphone; press again to resume normal handset use.



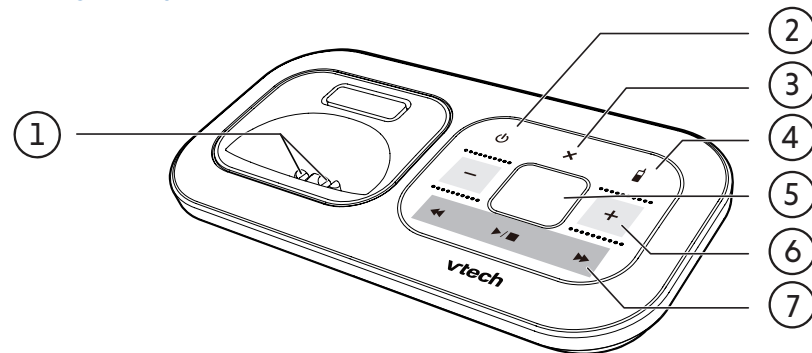

8	OK	<ul style="list-style-type: none"> Press to display the menu when the telephone is not in use. Once in the menu, press to select an item or save an entry or setting.
9		<p>Right soft key</p> <ul style="list-style-type: none"> Press to select the option displayed above the key. <p>Events soft key (when idle)</p> <ul style="list-style-type: none"> Flashes when there are new messages or new missed calls. When Events is displayed above the key, press to view a summary of new and old events, including messages in your answering machine, missed calls and voicemails (➔ EVENTS SUMMARY).
10		<ul style="list-style-type: none"> Hang up a call. Return to idle. Silence the handset ringer temporarily while the phone is ringing. <u>Press and hold</u> for 2 seconds to switch on or off the handset.
11	2 ^x _{abc}	<ul style="list-style-type: none"> Delete messages during message playback.
	4 ^k _{ghi}	<ul style="list-style-type: none"> Repeat current message during message playback. Press twice to skip to previous message during message playback.
	5 ^j _{kli}	<ul style="list-style-type: none"> Stop message playback.
	6 ^m _{mno}	<ul style="list-style-type: none"> Skip to next message during message playback.
12	#	<p><u>Press and hold</u> to turn the ringer on or off.</p>
13		<p>During a call connection, press to enhance the clarity and loudness of the voice on the handset earpiece.</p>
14		<ul style="list-style-type: none"> Press to access the call blocker menu when the telephone is not in use. When there is an incoming call, press to block the call. During a call, press to block the call.


TELEPHONE BASE




1	Charging contact	
2		Turn on or off the answering machine.
3		Delete message.
4		Page all handsets.
5	Message counter	
	<ul style="list-style-type: none"> Show number of messages recorded in the answering machine. 	
6		<ul style="list-style-type: none"> Increase listening volume. Increase ringer volume.
		<ul style="list-style-type: none"> Decrease listening volume. Decrease ringer volume.
7		Repeat message.
		<ul style="list-style-type: none"> Play messages. Stop message playback.
		Skip to next message.

Status bar

-  • The battery icon animates when the battery is charging.
-  • The battery icon flashes when the battery is low and needs charging.
-  **NOTE:** When the battery is low, the handset emits an alert tone every 5 seconds.
-  • The battery icon becomes solid when the battery is fully charged.

 The handset is out of range of the telephone base. Move the handset closer.

 The handset has poor signal strength. Move the handset closer to the telephone base.

 The handset is within the range of the telephone base and has good signal strength.

 Alarm is set.

 Volume booster feature is turned on.


 The keypad is locked.


 The handset microphone is muted.

 The handset ringer is turned off.


 The handset speakerphone is on.


Idle screen

 There are 3 new missed calls.


 There are more than 9 new missed calls.


 There are 2 new messages in your answering machine.

 There is new voicemail.


 The answering machine is turned off.


On calls

 There is an incoming call.


 The current call is on hold.

 Conference call is on.

 There is an intercom call.

 The telephone base is paging all handsets.

Call list

 Incoming calls.

 
 Outgoing calls.

 Missed calls.

EVENTS SUMMARY

When **Events** is displayed above the right soft key, press the key (also called **Events** soft key) to view a summary of new and old events.

- Missed calls
- Messages in your answering machine
- Voicemails

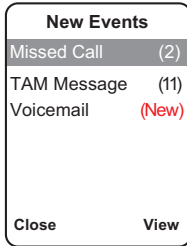

When there is new event, the **Events** soft key flashes.

The number of new or unread events is displayed in red in the summary.

- Press or to highlight **Missed Call** | **TAM Message** | **Voicemail**.
 - » **Missed Call** - when highlighted, press **View** soft key to see the detail.
 - » **TAM Message** - when highlighted, press **Play** soft key to play the new message(s).
 - » **Voicemail** - when highlighted, press **Dial** soft key to dial your voicemail number. If you have not set up your voicemail number, you can enter the number and save it before dialling (➔ [SET VOICEMAIL NUMBER](#)).

USE THE HANDSET KEYS

Access the menu

For PS1350

- Press (Left soft key) while **Menu** displayed above the key (also called **Menu** soft key).

- OR -

- Press to access the menu.

For PS1351/PS1352

- Press to access the menu.

Switch on / off the handset

1. Press and hold and the screen displays **Switch off Handset?**.
2. Press or (Right soft key) for **Yes**; or press again or (Left soft key) for **No**.

NOTES:

- Press to switch on the handset when it is switched off.
- Press when the handset is idle will dim the handset screen; press again the handset screen will turn off.

Lock / unlock the handset keypad

- Press and hold to lock or unlock the handset keypad. You hear a confirmation tone and the handset displays on the star bar.


Enter texts

- **Move the cursor:** press or to move the cursor to the left or right.
- **Insert a character:** each time you press a dialling key (**0 - 9**), the character on that key appears. Additional key presses produce other characters on that key. The first letter of every word is a capital letter. The remaining letters in a word start as lower case letters (➔ [CHARACTER CHART](#)).
- **Insert a space:** press .
- **Erase entry:** press or **Clear** soft key to erase a character or digit; or press and hold to erase all characters or digits.
- **Upper/lower case:** press to change the next letter to upper or lower case.



Character chart

 
Dialling keys	Characters by number of key presses												
	1	2	3	4	5	6	7	8	9	10	11	12	13
1	space	1	&	_	()	<	>	#	@	=			
2	A	B	C	2	Ä	Â	Ç						
3	D	E	F	3									
4	G	H	I	4	Ğ	î	ï						
5	J	K	L	5									
6	M	N	O	6	Ö								
7	P	Q	R	7	β	ş							
8	T	U	V	8	Ü								
9	W	X	Y	9									
0	.	,	-	0	/		+	"	'	:	!	?	*

MENU OPTIONS

When the telephone is not in use, press the **Menu** soft key (for **PS1350** only) or press  to access the menu options.

NOTE: You can change the menu display to **Icon mode** or **List mode** (→ [SET MENU MODE](#)).

- Press  or  to scroll through the menu options.

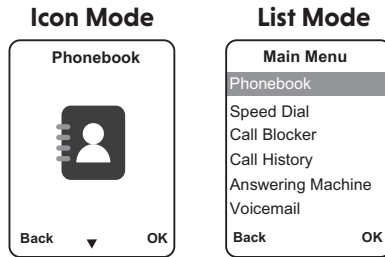




 



 
TIP Refer to the online Complete User's Manual for a full set of installation and operation instructions at www.vtechphones.eu.

INITIAL SETUP

After connecting the telephone base to power supply for the first time, the handset prompts for initial setup.

 



 
 
 



You can set up your telephone system via the guide, or configure each of the settings through the **Basic setup** menu.

- Language** →  or  → **Next** soft key.
 -  can skip the initial setups.
- Basic setup** →  or  →  to select. Follow the screen displays to set up each option.
 -  can skip the setups.
 - You can set up the following:
 - Handset Name;**
 - TAM Settings** - set the answering machine; and
 - Date & Time** - set date/time.
 - OR -

Press **Guide** soft key to set up each option step by step via the guide.
-  to save the settings.

Basic settings

 



 
 
SET MENU MODE











 
1. Press  or **Menu** soft key.
2.  or  →  (**Settings**) → .
3.  to select **Display**.
4.  to select **Menu Mode**.
5.  or  → **Icon Mode | List Mode** →  to save.

 
 
SET DISPLAY LANGUAGE

1. Press  or **Menu** soft key.
2.  or  →  (**Settings**) → .
3.  or  → **Handset Settings** → .
4.  or  → **Language** → .
5.  or  → **English | Deutsch | Española | Français | Italiano | Nederlands | Português**.
6.  to save.


 



 
SET DATE & TIME

1. Press  or **Menu** soft key.
2.  or  →  (**Settings**) → .
3.  or  → **Handset Settings** → .

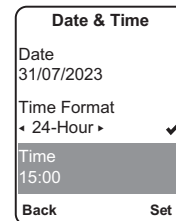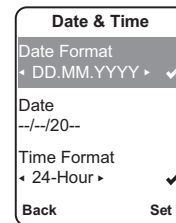



 
 






4.  or  → **Date & Time** → .
5.  or  to toggle between **DD.MM.YYYY** and **MM.DD.YYYY**.
6.  → **Date** → Enter the date.
7.  → **Time Format**.
8.  or  to toggle between **12-Hour** and **24-Hour**.
9.  → **Time** → Enter the time →  to save.



SET AUTO ANSWER



1. Press  or **Menu** soft key.
2.  or  →  (**Settings**) → .
3.  or  → **Auto Answer** →  or  to toggle between **On** and **Off**.
4.  to save the setting.

SET BRIGHTNESS



1. Press  or **Menu** soft key.
2.  or  →  (**Settings**) → .
3.  to select **Display**.
4.  or  → **Brightness** → .
5.  or  → **Level 1 | Level 2 | Level 3** →  to save.

 
Operate

MAKE A CALL



- Enter telephone number →  or .

- OR -

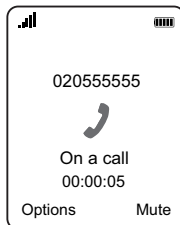-  or  → Enter telephone number.



ANSWER A CALL

- Press ,  or **Answer** soft key.

 
» **Silence** soft key - *Mute ringer.*

»  - *Block the call.*



END A CALL

 
 
- Press .

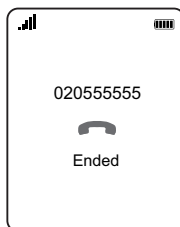

VOLUME UP / DOWN


- During a call, press  to turn up or  to turn down the volume.

VOLUME BOOSTER

- During a call, press  on the handset to enhance the clarity and loudness of the voice on the handset earpiece. When this feature is turned on, the handset display  in the status bar.



MUTE A CALL

Use the mute function to turn off the microphone. You can hear the caller, but the caller cannot hear you.

- During a call, press **Mute** soft key. The handset displays  on the status bar.
- When the call is muted, press **Unmute** soft key to unmute.

CALL WAITING

If you subscribe to call waiting service from your telephone service provider, and someone calls while you are already on a call, you hear an alert tone.

- Press  to put your current call on hold and take the new call.
- Press  at any time to switch back and forth between calls.

Call list

If you have subscribed to the Caller ID service from your telephone service provider, you will see the name, number and date and time of incoming calls. Each handset also stores the last 20 telephone numbers dialed.

VIEW A CALL HISTORY

1. Press .

- OR -

 
Press  or **Menu** soft key →  or  →  (**Call History**) →  to view list of **All Calls**.

» **All Calls** - Showing all missed, answered and outgoing calls.




2. Press **Type** soft key →  or  → **Missed** | **Answered** | **Outgoing**.

» **Missed** - Showing missed calls only.
» **Answered** - Showing answered calls only.
» **Outgoing** - Showing outgoing calls only.

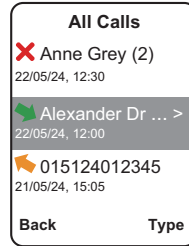





3.  to select.








DIAL FROM A CALL HISTORY

1. Search for the call history (→ [VIEW A CALL HISTORY](#)).
2.  or  to highlight the desired called number. Press  or  to call.





DELETE CALL HISTORY

1. Search for the call history (→ [VIEW A CALL HISTORY](#)).
2.  or  to highlight the desired contact →  to show details.
3. Press **Options** soft key →  or  to highlight **Delete Entry** to delete the current entry, or highlight **Delete All** to delete all entries.
4.  or **OK** soft key → **Yes** soft key to confirm.





ADD A CALL HISTORY TO PHONEBOOK

1. Search for the call history (→ [VIEW A CALL HISTORY](#)).
2.  or  to highlight the desired called number.
3. Press  → **Options** soft key →  to select **Add Contact**.
4. Enter the contact name and phone number →  or **Save** soft key.

VIEW OUTGOING CALL LIST ENTRIES

1. Press .
2.  or  to browse through the outgoing call list.
 -  to view the call details.














DIAL AN OUTGOING LIST ENTRY

1. Search for the outgoing call list entry (→ [VIEW OUTGOING CALL LIST ENTRIES](#)).
2.  or  to highlight the desired number. Press  or  to call.

Phonebook




The phonebook can store up to 1,000 entries, which are shared by all handsets. Each name and telephone number of an entry may consist of up to 32 digits or characters. Entries are sorted alphabetically.

 
STORE A NUMBER TO PHONEBOOK

1. Press  or **Menu** soft key.
2.  to select  (**Phonebook**) → **Options** soft key.
3.  or  → **Add Contact** → .
4.  or  → **First Name | Last Name | Home Number | Mobile Number | Business Number** → Enter the contact details.
5.  or  → **VIP** →  or  to toggle between **On** and **Off**.
6.  to save.

NOTE: Each phonebook entry should consist of at least the first name, last name and one telephone number.



VIEW THE PHONEBOOK ENTRIES

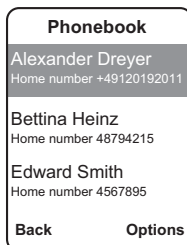1. Press .
2.  or  to browse through the phonebook.







SEARCH A CONTACT











1. Press .

2. Enter the first few characters of the contact → **Search** soft key.
3.  or  to browse through the contacts starting with the same characters (→ [CHARACTER CHART](#)).






DIAL A PHONEBOOK ENTRY

1. Search for the phonebook entry (→ [VIEW THE PHONEBOOK ENTRIES](#) or [SEARCH A CONTACT](#)).
2.  or  to highlight the desired contact. Press  or  to call.

EDIT A PHONEBOOK ENTRY

 



 


 


 



1. Search for the phonebook entry (→ [VIEW THE PHONEBOOK ENTRIES](#) or [SEARCH A CONTACT](#)).
2.  or  to highlight the desired contact → **Options** soft key.
3.  or  → **Edit Contact** → .
4. Edit the contact name and phone number →  or  → **VIP** →  or  to toggle between **On** and **Off**.
5.  or **Save** soft key.

DELETE PHONEBOOK ENTRIES

1. Search for the phonebook entry (→ [VIEW THE PHONEBOOK ENTRIES](#) or [SEARCH A CONTACT](#)).
2.  or  to highlight the desired contact → **Options** soft key.
3.  or  to highlight **Delete Contact** to delete the current entry, or highlight **Delete All Contacts** to delete all entries.
4.  or **Yes** soft key to confirm.

Speed dial

 



 


 


 
STORE A SPEED DIAL NUMBER

1. Press  or **Menu** soft key.
2.  or  →  (**Speed dial**) → .
3.  or  to highlight a speed dial location **1 - 9** → **Options** soft key.
4.  to select **Manual Entry** → Enter name and number → **Save** soft key.
- OR -
 or  → **Phonebook** → .
5.  or  →  → Edit the details if necessary → **Save** soft key.

 



 




 
DIAL A SPEED DIAL NUMBER

- Press and hold the dialling key **1 - 9** to dial the assigned number.

EDIT A SPEED DIAL NUMBER

1. Press  or **Menu** soft key.
2.  or  →  (**Speed dial**) → .
3.  or  to highlight a speed dial location **1 - 9** → **Options** soft key.
4.  or **OK** soft key to choose **Edit Entry**.
5.  or  → **Manual Entry** or **Phonebook**.
 - » **Manual Entry** - edit the contact details.
 - » **Phonebook** - assign another phonebook contact to the speed dial location.
6.  or **Save** soft key to save.

DELETE A SPEED DIAL NUMBER

1. Press  or **Menu** soft key.
2.  or  →  (**Speed dial**) → .
3.  or  to highlight a speed dial location **1 - 9** → **Options** soft key.
4.  or  to highlight **Delete Entry**.
5.  or **OK** soft key → **Yes** soft key to confirm.

Multiple handset use (For PS1351/PS1352 only)

MAKE AN INTERNAL CALL

- When the phone is not in use, press **Internal** soft key.

If you have more than 2 handsets:

 or  → **All | Handset X | Handset Y** → .

» **Handset X / Handset Y** represent the handset names.

ANSWER AN INTERNAL CALL

- On the destination handset, press  or .

CALL TRANSFER / CONFERENCE CALL

While on an outside call, you have the options to transfer the outside call to another handset or to establish a 3-way conference with another handset.

1. While on an outside call, press **Options** soft key.

2.  or  → **Internal Call** → .

If you have more than 2 handsets:

 or  → **All | Handset X | Handset Y** → .

» **Handset X / Handset Y** represent the handset names.

3. To answer the internal call on the destination handset, press  or .

The outside call is put on hold.

4. While on the internal call, press **Options** soft key on the originating handset.







5.  or  → **Transfer | Conference** → .

» **Transfer** - The outside call is transferred to the destination handset.






» **Conference** - A 3-way conference call is established.

Nuisance and unwanted call blocker







ADD A NUMBER TO BLACK LIST

1. Press .
2.  to select **Black List** → **Options** soft key.
3.  to select **Add Entry**.
4.  or  → **Name | Number** → Enter the contact details.
5.  or **Save** soft key to save.






VIEW THE BLACK LIST ENTRIES

1. Press .
2.  to select **Black List** → **Options** soft key.
3.  or  → **View Detail** → .








 








EDIT A BLACK LIST ENTRY

1. Press .
2.  to select **Black List** → **Options** soft key.
3.  or  → **Edit Entry** → .
4. Edit the contact name and phone number →  or **Save** soft key.












DELETE A BLACK LIST ENTRIES


1. Press .
2.  to select **Black List** → **Options** soft key.
3.  or  to highlight **Delete Entry** to delete the current entry, or highlight **Delete All** to delete all entries.
4.  or **Yes** soft key to confirm.

BLOCK UNKNOWN CALLS

1. Press .
2.  or  → **Settings** → .
3.  to select **Block Mode**.
4.  or  → **Block All Calls** | **Allow VIP** | **Block Blacklist** | **Off** → 
 - » **Block All Calls** - Block all calls, including phonebook contacts and VIP contacts.
 - » **Allow VIP** - Block all calls except VIP contacts.
 - » **Block Blacklist** - Block numbers saved in the black list only.
 - » **Off** - Allow all calls.
5.  or  → **Always On** → 
- OR -
 or  → **Set Time** →  or  → **Enter Start time** → **Enter End Time**.
6.  or **Save** soft key to save.

SET BLOCK CALL TYPE


1. Press .
2.  or  → **Settings** → .
3.  or  → **Call Type** → .
4.  or  → **Withheld** | **International** | **Unavailable** | **Payphone**.
5.  or  to toggle between **On** and **Off**.
 - » **Withheld** - On: block calls with status marked as "Withheld".
 - » **International** - On: block all international calls.
 - » **Unavailable** - On: block calls with status marked as "Unavailable".
 - » **Payphone** - On: block calls made from a payphone.

NOTE: These options require that you have set to **Block All Calls** or **Allow VIP** (→ [BLOCK UNKNOWN CALLS](#)).
6.  or **Save** soft key to save.

 






 
 




Answering machine (TAM)

TURN ANSWERING MACHINE (TAM) ON / OFF

 











 
Turn on or off with base

- Press  on the telephone base to turn the TAM on; press again to turn it off.

Turn on or off with handset



1. Press  or **Menu** soft key.
2.  or  →  (**Answering Machine**) →  → **Options** soft key.
3.  or  → **TAM Settings** → .
4.  to select **TAM On/Off** → .
5.  or  → **On | Off** →  to save the setting.

SET ANSWER MODE

 



 



1. Press  or **Menu** soft key.
2.  or  →  (**Answering Machine**) →  → **Options** soft key.
3.  or  → **TAM Settings** → .
4.  to select **Answer Mode** → .
5.  or  → **Ans & Rec | Ans Only** →  to save the setting.
 - » **Ans & Rec** - Answer calls and record messages.
 - » **Ans Only** - Answer calls only and will not record messages.

PLAY MESSAGE

Handset:

 
1. Press .
2.  → **Options** soft key → go to step 3 below.

- OR -

1. Press  or **Menu** soft key.
2.  or  →  (**Answering Machine**) →  → **Options** soft key.
3.  or  → **Play All New | Play Message** → 
 - » **Play All New** - If there are new messages. Unread new messages will be indicated by a yellow dot.
 - » **Play Message** - Play new or old messages.

Telephone base:



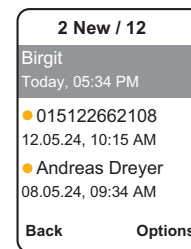


- Press  /  to play message or stop playback.



OPTIONS DURING MESSAGE PLAYBACK

Handset:

When a message is playing:

-  to repeat current message.
-  twice to play the previous message.
-  to skip to the next message.
-  to delete current message.
-  to stop message playback.

Telephone base:

When a message is playing:

- to repeat current message.
- to skip to the next message.
- to delete current message.
- to stop message playback.

DELETE ALL MESSAGES

1. Press or **Menu** soft key.
2. or → (**Answering Machine**) → → **Options** soft key.
3. or → **Del All Messages** → .
4. or → **All** or **Only Old Message** → or **DELETE** soft key to confirm.

SAVE A NUMBER IN MESSAGE LIST

1. Press or **Menu** soft key.
2. or → (**Answering Machine**) → → **Options** soft key.
3. or → **Add Number** → .
4. Edit the contact name and phone number → or → **VIP** → or to toggle between **On** and **Off**.
5. or **Save** soft key.

ANNOUNCEMENT - RECORD / PLAYBACK / RESET

 







 



 
1. Press or **Menu** soft key.
2. or → (**Answering Machine**) → → **Options** soft key.
3. or → **TAM Settings** → .
4. to select **Announcement** → .
5. or → **Ans & Rec | Ans Only**.
 - » **Ans & Rec** - Record your own answering machine's announcement and play it when it is set to answer calls and record messages.
 - » **Ans Only** - Record your own answering machine's announcement and play it when it is set to answer calls only.
6. or → **Record | Playback | Reset** → to save the setting.
 - » **Record** - Record your own answering machine's announcement.
 - » **Playback** - Play the currently used announcement.
 - » **Reset** - Reset to default announcement.

SET ANSWERING MACHINE LANGUAGE

 



 


 
 
 


 
To set the voice language of the answering machine:

1. Press or **Menu** soft key.
2. or → (**Answering Machine**) → → **Options** soft key.
3. or → **TAM Settings** → .
4. or → **TAM Language** → .
5. or → **English | Deutsch | Española | Français | Italiano | Nederlands | Português** → to save the setting.



SET ANSWER DELAY

 






 
 



 


 
1. Press  or **Menu** soft key.
2.  or  →  (**Answering Machine**) →  → **Options** soft key.
3.  or  → **TAM Settings** → .
4.  to select **Answer Delay** → .
5.  or  → **Time Saver | 2 Rings | 4 Rings | 6 Rings | 8 Rings** →  to save the setting (default is **6 Rings**).
 - » **Time Saver** - Answering machine answers a call after two rings when you have new messages, and after four rings when there are no new messages. This feature allows you to check for new messages and avoid paying long distance charges when calling from out of your local area (➔ [SET REMOTE ACCESS ON/OFF](#)).
 - » **2, 4, 6 or 8 Rings** - Answering machine answers calls after 2, 4, 6 or 8 rings.

SET RECORDING LENGTH

1. Press  or **Menu** soft key.
2.  or  →  (**Answering Machine**) →  → **Options** soft key.
3.  or  → **TAM Settings** → .
4.  to select **Recording Length** → .
5.  or  → **30 seconds | 1 minute | 2 minutes | 3 minutes | Unlimited**
→  to save the setting (default is **3 minutes**).

 






 
 



 
SET CALL SCREENING ON / OFF

Use this feature to choose whether incoming messages can be heard over the speaker while they are being recorded. While monitoring an incoming message, you can answer the call by pressing  or  on a handset.





 


 
 
1. Press  or **Menu** soft key.
2.  or  →  (**Answering Machine**) →  → **Options** soft key.
3.  or  → **TAM Settings** → .
4.  to select **Call Screening** → .
5.  or  → **Local handset | Base** → .
6.  or  → **Active | Inactive** →  or **Save** soft key to save the setting (default is **Active**).

SET REMOTE ACCESS ON / OFF

You can turn on or off the remote access feature to access your messages and operate your answering machine (TAM) remotely from any touch-tone telephone. You will need to enter the remote access PIN (**0000**). This feature is turned off by default.





 
 


 


 
 
1. Press  or **Menu** soft key.
2.  or  →  (**Answering Machine**) →  → **Options** soft key.
3.  or  → **TAM Settings** → .
4.  to select **Remote Access** → .
5.  or  → **On | Off** → Enter the remote access PIN if prompted
→  to save the setting (default is **Off**).

 
RECORD A MEMO

1. Press  or **Menu** soft key.
2.  or  →  (**Answering Machine**) →  → **Options** soft key.
3.  or  → **Memo** → .
4. Speak towards the handset's microphone →  or **Save** soft key.







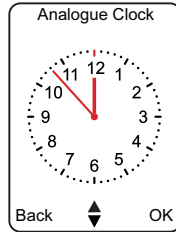
 


 
Other settings

SET SCREEN SAVER





 


 


 


 
1. Press  or **Menu** soft key.
2.  or  →  (**Settings**) → .
3.  to select **Display**.
4.  or  → **Screen Saver** → .
5.  or  → **Screen Saver OFF | Sunset | Mountain | Leaves | Analogue Clock | Digital Clock**.
 - » **Screen Saver OFF** - *disables screen saver.*
 - » **Sunset | Mountain | Leaves** - *displays wall paper with various styles.*
 - » **Analogue Clock | Digital Clock** - *If you select analogue or digital clock, press  to continue selecting the colour of the clock.*
6.  to save the setting.



 



 
 

SET RINGER - INTERNAL / EXTERNAL CALLS

1. Press  or **Menu** soft key.
2.  or  →  (**Sounds**) → .
3.  or  → **External Ringer | Internal Ringer** → .
4. While highlighting **Ringer Melody** →  or  to select from **Melody 1 to Melody 20** (default is **Melody 1**).
5.  or **Save** soft key to save the setting.

SET RINGER VOLUME







1. Press  or **Menu** soft key.
2.  or  →  (**Sounds**) → .
3.  or  → **External Ringer | Internal Ringer** → .
4.  or  → **Ringer Volume** → .
5.  or  to select from **Level 1 to Level 7** or **Off** (default is **Level 4**).
6.  to save the setting.

SET VOICEMAIL NUMBER

1. Press  or **Menu** soft key.
2.  or  →  (**Voicemail**) → .
3. **Call Voicemail?** →  or **Yes** soft key.
4. **Voicemail Number Empty** →  or **Edit** soft key.












5. Enter the telephone number →  or **Save** soft key.

To dial the voicemail number













1. Press  or **Menu** soft key.
2.  or  →  (**Voicemail**) → .
3. **Call Voicemail?** →  or **Yes** soft key.

TONE - SET KEY TONE ON / OFF

To set the key tone on or off each time when you press a key on the handset:

1. Press  or **Menu** soft key.
2.  or  →  (**Sounds**) → .
3.  or  → **Advisory Tones** → .
4. While highlighting **Key Tone** →  or  to toggle between **On** and **Off**.
5.  or **Save** soft key to save the setting.

TONE - SET ALERT TONES ON / OFF

1. Press  or **Menu** soft key.
2.  or  →  (**Sounds**) → .
3.  or  → **Advisory Tones** → .
4.  or  → **Charging** | **New Notification** | **Confirmation Tone** | **Range Warning** →  or  to toggle between **On** and **Off**.















 








When you set the advisory tone to on, the telephone emits an alert tone when:

- » **Charging** - *The battery is low and needs charging.*
- » **New Notification** - *There is a new event.*
- » **Confirmation Tone** - *You save or change a setting.*
- » **Range Warning** - *The handset is out of range of the telephone base.*

5.  or **Save** soft key.


ALARM - SET / STOP

Set alarm time and activation

1. Press  or **Menu** soft key.
2.  or  →  (**Alarm Clock**) → .
3.  or  → **Alarm 1** | **Alarm 2** | **Alarm 3** | **Alarm 4** | **Alarm 5** → .
4.  or  → **Edit Alarm** → .
 - If you have previously set an alarm, selecting **Clear Alarm** will erase the settings for the alarm selected.
5.  or  → **Status** | **Time** | **Name** | **Melody** | **Volume**.
 - » **Status** -  /  → **Off** | **One Time** | **Repeated**.
 - » **Weekdays** - *If you have selected Repeated for Status*
 →  /  to highlight any day of a week
 →  /  to select or deselect
 → **Done** soft key to return to the previous menu.
 - » **Time** - *Enter the alarm time.*
 - » **Name** - *Enter a name for the current alarm settings.*
 - » **Melody** -  /  to select from **Melody 1 to Melody 20**.
 - » **Volume** -  /  to select from **Volume 1 to Volume 7, or Off**.

Alarm 1	
Status	Off
Time	00:00
Name	
Back	Save














Weekdays	
Sunday	<input checked="" type="checkbox"/>
Monday	<input checked="" type="checkbox"/>
Tuesday	<input checked="" type="checkbox"/>
Wednesday	<input type="checkbox"/>
Thursday	<input type="checkbox"/>
Friday	<input type="checkbox"/>
Back	Done

6.  or **Save** soft key to save the settings.
» An alarm icon (🕒) will display on the status bar.













Stop alarm

- Press .

SET LCD BACKLIGHT



1. Press  or **Menu** soft key.
2.  or  →  (**Settings**) → .
3.  to select **Display** → .
4.  or  → **LCD Backlight** → .
5.  or  → **Dim | Auto-off** →  to save the setting.

RENAME HANDSET

1. Press  or **Menu** soft key.
2.  or  →  (**Settings**) → .
3.  or  → **Handset Settings** → .
4.  or  → **Handset Name** → .
5. Edit the handset name →  or **Save** soft key to save the setting.













Telephon base settings

SET BASE RINGTONE VOLUME














- Press  on the telephone base to turn up or  to turn down the ringer volume.

SET DIALLING PREFIX

 










 
 
 
If you set a one-digit dialling prefix, the telephone will automatically add it to all outgoing telephone numbers when you dial.

1. Press  or **Menu** soft key.
2.  or  →  (**Settings**) → .
3.  or  → **Base Settings** → .
4.  or  → **Dialling Prefix** → .
5. Enter the digit for the dialling prefix →  or **Save** soft key to save.

CHANGE PIN

1. Press  or **Menu** soft key.
2.  or  →  (**Settings**) → .
3.  or  → **Base Settings** → .
4.  or  → **Change PIN** → .
5. **System PIN** → Enter the PIN (default is **0000**) → **New PIN** → Enter the new PIN →  → **Repeat PIN** → Enter the new PIN again to confirm →  or **Save** soft key to save.

REGISTER A HANDSET








 
 
 
 

1. Press  or **Menu** soft key.
2.  or  →  (**Settings**) → .
3.  or  → **Base Settings** → .
4.  or  → **Registration** → .
5.  or **Yes** soft key to confirm de-registering from the telephone base.
 - **No** soft key to cancel registration.
6. **System PIN** → Enter the PIN (default is **0000**) →  → Handset returns to idle → **Register** soft key.
7. **Long press PAGE button on the base for 2 seconds** →  or **Register** soft key.
8. Press **PAGE** key on the telephone base for 2 seconds to register the handset.

NOTES:

 






 



 

- You may register GAP compliant handsets to your **PS1350** telephone base. Follow the registration instructions of your GAP compliant handset, and then follow Step 8 above to register it to the base.
- You can register up to 4 handsets to the telephone base.
- Registering a GAP compliant handset will provide basic functions of making and receiving calls with your **PS1350** telephone system.

RESET HANDSET / BASE


Reset handset

1. Press  or **Menu** soft key.
2.  or  →  (**Settings**) → .
3.  or  → **Troubleshooting** → .
4.  to choose **Reset Handset** → .
5. **System PIN** → Enter the PIN (default is **0000**) → .
6. **Reset handset to default?** →  or **Yes** soft key.

Reset base

1. Press  or **Menu** soft key.
2.  or  →  (**Settings**) → .
3.  or  → **Troubleshooting** → .
4.  or  → **Reset Base** → .
5. **System PIN** → Enter the PIN (default is **0000**) → .
6. **Reset Base to default?** →  or **Yes** soft key.

Technical Specification

Frequency control	Crystal controlled PLL synthesizer
Transmit frequency	1.88 GHz to 1.9GHz
RF power	<250mW
Channels	10
Nominal effective range	Actual operating range may vary according to environment conditions at the time of use.
	Handset: Battery: 1) Yi Yang Corun Battery Co., Ltd.; Ni-MH AAA850mAh 1.2V 2) GPI International Ltd.; VTRHCH83C109 3) Shenzhen Highpower Technology Co., Ltd.; HFR-AAA850
 Power requirement	Base/charger: Adaptor: 1) Jiangxi Jian Aohai Technology Co., Ltd. A318-060045W-EU1 (EU plug) A318-060045W-UK1 (UK plug) 2) VTech Telecommunications Limited. VT05EEU06045 (EU plug) VT05EUK06045 (UK plug) Input: 100-240V AC 50/60Hz 0.15A; Output: 6VDC 0.45A 2.7W
Power consumption	Operating condition Off mode: 0.6W Network standby mode: 1W

