

# XS

# 1050

# 1051

# 1052

# 1053

Scan the QR code for  
support information



**vtech**<sup>®</sup>

# Congratulations

on purchasing your new VTech product. Before using this telephone, please read Important safety instructions.

This manual has all the feature operations and troubleshooting necessary to install and operate your new VTech telephone. Please review this manual thoroughly to ensure proper installation and operation of this innovative and feature rich VTech product.

## Important safety instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water (for example, near a bath tub, kitchen sink, swimming pool).
5. Do not expose the telephone to direct sunlight or extreme cold environment. Do not put the telephone close to heating sources such as radiators, cookers, etc.
6. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
7. Unplug this product from the wall outlet and refer servicing to VTech/distributor under the following conditions:  
When the power supply cord or plug is damaged or frayed.  
If the product does not operate normally by following the operating instructions.  
If the product has been dropped and the cabinet has been damaged.  
If the product exhibits a distinct change in performance.
8. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
9. Do not use the telephone to report a gas leak in the vicinity of the leak.
10. Use only the supplied NiMH (Nickel Metal Hydride) batteries! The operation periods for the handsets are only applicable with the default battery capacities.
11. The use of other battery types or non-rechargeable batteries/primary cells can be dangerous. These may cause interference and/or unit damages. The manufacturer will not be held liable for damage arising from such non-compliance.
12. Do not use third party charging bays. The batteries may be damaged.

13. Please note the correct polarity while inserting the batteries.
14. Battery should not be exposed to excessive heat such as bright sunshine or fire and immersed in water.
15. The batteries cannot be subjected to high or low extreme temperature and low air pressure at high altitude during use, storage or transportation. Disposal of batteries into fire or a hot oven, or mechanically crushing or cutting or the batteries can result in an explosion. Leaving the batteries in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas. Batteries subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.



16. Use only adaptors and battery listed below.
  - Use only the provided external power supply: VTech Telecommunications Limited. Model: VT05EEU06045 | VT05EUK06045; Jiangxi Jian Aohai Technology Co., Ltd. Model: A318-060045W-EU1 | A318-060045W-UK1.
  - Use only the supplied batteries: Yi Yang Corun Battery Co., Ltd. Model: Ni-MH AAA600mAh 1.2V; GPI International Ltd. Model: VT60AAAHc; Shenzhen Highpower Technology Co., Ltd. Model: HFR-AAA600.

### Disposal of Old Equipment and Batteries (WEEE)

Only for European Union and countries with recycling systems

These symbols (a, b) on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries must not be mixed with general household waste. Batteries should also be removed from the device before scrapping. For proper treatment, recovery and recycling of old products and batteries, please take them to applicable collection points in accordance with your national legislation. By disposing of them correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment. For more information about collection and recycling, please contact your local municipality. Penalties may be applicable for incorrect disposal of this

waste, in accordance with national legislation. VTech Telecommunication Ltd. is registered at Stiftung elektro-altgeräte-register under WEEE-Reg. number DE 52869849.

### Product disposal instructions for business users

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

### Information on Disposal in other countries outside the European Union

These symbols (a, b) are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

### Note for the battery symbol

This symbol (b) might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.


### Recycle your device (WEEE directive 2012/19/EU)

The WEEE logo appears on the product to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste.

### Approval and conformity

This product is intended for use within Europe and the UK. This equipment complies with the essential requirements to EU's Radio Equipment Directive (2014/53/EU) and the UK's Radio Regulations 2017 on radio systems and telecommunication equipment. VTech Telecommunication Ltd. hereby declares that this telephone XS1050/XS1051/XS1052/XS1053 is in compliance with the essential requirements and other relevant provisions of EU's Radio Equipment Directive (2014/53/EU) and the UK's Radio Equipment Regulations 2017.

The declaration of conformity may be viewed at <https://www.vtech.com/rtte-directive>.

The  symbol confirms the conformity of the telephone and the above directive.

**Importer:** Snom Technology GmbH.  
Wittestraße 30G, 13509, Berlin, Deutschland.

**Manufacturer:** VTech Telecommunications Ltd.  
23/F, Tai Ping Industrial Centre, Block 1, 57 Ting Kok Road, Tai Po, Hong Kong.

### Technical Specifications

Frequency control	Crystal controlled PLL synthesizer
Transmit frequency	1.88GHz to 1.9GHz
RF power	<250mW
Channels	10
Nominal effective range	Actual operating range may vary according to environment conditions at the time of use



Power requirements

#### Handset:

- Battery:
- Yi Yang Corun Battery Co., Ltd.  
Ni-MH AAA600mAh 1.2V
  - GPI International Ltd.;  
VT60AAAHC
  - Shenzhen Highpower  
Technology Co., Ltd.;  
HFR-AAA600

#### Base / Charger:

Adaptor:

- VTech Telecommunications  
Limited.  
VT05EEU06045 (EU plug) |  
VT05EUK06045 (UK plug)
- Jiangxi Jian Aohai Technology  
Co., Ltd.  
A318-060045W-EU1 (EU plug) |  
A318-060045W-UK1 (UK plug)  
Input: 100-240V AC 50/60Hz 0.15A;  
Output: 6VDC 0.45A 2.7W

Average active efficiency: 73.8%

Power consumption	Operating condition Off mode: 0.6 W Network standby mode: 1 W No-load: 0.09W
Environmental condition	Temperature: 5°C - 40°C Humidity: 20% - 75%

# Limited Warranty

## VTech Product Warranty

Thank you for purchasing this cordless phone from VTech.

- The product is covered by a two-year warranty from the date of purchase (date from which the warranty period starts), against any defects in materials or workmanship.
- The product may be returned to the place of purchase.
- During the limited warranty period, VTech's authorized service representative will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
- If the product covered by this warranty is damaged due to misuse, modification or unauthorized repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
- This warranty is personal to the original purchaser and is not transferable.
- Breakages to the LCD screen are not covered by the warranty.

## Please retain your original sales receipt as proof of purchase.

To obtain warranty service, please visit our website at [www.vtechphones.eu](http://www.vtechphones.eu).



<b>Important safety instructions</b>	<b>3</b>	<b>Menu navigation</b>	<b>20</b>
<b>What is in the box</b>	<b>12</b>	In idle mode	20
<b>Connect and charge</b>	<b>13</b>	ANS. MACHINE	20
Install the battery	13	CALL LIST	20
Connect the telephone base	13	PHONEBOOK	20
Connect the charger	14	BS SETTINGS	20
Charge the battery	14	HS SETTINGS	20
Check the battery level	15	REGISTRATION	20
Check for dial tone	15	DEFAULT	20
If you do not hear a dial tone	15		
<b>Set date and time</b>	<b>16</b>		
<b>Operating range</b>	<b>16</b>		
<b>Handset Overview</b>	<b>17</b>		
Handset display icons overview	18		
<b>Telephone base Overview</b>	<b>19</b>		
<b>Charger Overview</b>	<b>19</b>		









<b>Make, answer or end a call</b>	<b>21</b>	<b>Use the phone menu</b>	<b>24</b>	<b>Retrieve voicemail</b>	<b>28</b>
Predial a call	21	<b>Phonebook</b>	<b>24</b>	<b>Answering machine</b>	<b>29</b>
Answer a call	21	Add a phonebook entry	24	Message playback	29
End a call	21	Review the phonebook		Control the playback	29
Turn the handset ringer on/off	21	entries	25	Delete all messages	30
Turn the keypad lock on/off	21	Check number of phonebook		Message indicator on base	30
Share call	21	entry used	25	Record memo	31
To make a 3-way conversation	21	Dial a phonebook entry	25	Call intercept	31
Adjust listening volume	21	Edit a phonebook entry	26	Remote access	32
To adjust the listening volume		Delete a phonebook entry/		Turn on/off the answering	
on a cordless handset	21	all entries	26	machine	33
Call waiting	22	<b>Call list</b>	<b>26</b>		
<b>Redial list</b>	<b>22</b>	Save a call list entry to the			
Review a redial list entry	22	phonebook	27		
Store a redial number into the		Dial a call list entry	27		
phonebook	22	Delete a call list entry	27		
Redial a call from list	22	Set the type of calls to be			
Delete a redial list entry	23	stored in the call list	28		
Delete all redial entries	23				
<b>Find handset</b>	<b>23</b>				
To start paging	23				
To end paging	23				



<b>Handset settings</b>	<b>34</b>	<b>Register a handset</b>	<b>40</b>	<b>General product care</b>	<b>44</b>
Set languages	34	<b>Reset phone settings</b>	<b>40</b>	Taking care of your telephone	44
Set date and time	34	<b>Answering machine and settings</b>	<b>41</b>	Avoid rough treatment	44
Set date format	34	Set your built-in answering machine	41	Avoid water	44
Set time format	34	Set the answer mode	41	Electrical storms	44
Set date and time	34	Select the answering machine language	41	Cleaning your telephone	44
<b>Ringer</b>	<b>35</b>	Default outgoing message	42	Storage	45
Set ringer melody	35	Record your own outgoing message	42	<b>Frequently asked questions</b>	<b>45</b>
Set ringer volume	35	Play and delete your outgoing message	42		
<b>Tone settings</b>	<b>36</b>	Options during playback	42		
Set key tone on/off	36	Set answer delay	43		
Set alert tones on/off	36	Set record time	43		
<b>Alarm</b>	<b>36</b>	Turn on/off the call screening	43		
Set alarm on/off and alarm time	36	Turn on/off remote access	43		
Rename handset	37	Change the remote access PIN	44		
Set auto answer	37				
<b>Base settings</b>	<b>37</b>				
<b>Ringer</b>	<b>37</b>				
Set ringer volume	37				
Delete handset	38				
Set dial mode	38				
Change length of flash time	38				
Change the system PIN	39				
Turn on/off ECO mode	39				

## What is in the box

Your telephone package contains the following items. Save your sales receipt and original packaging in case it is necessary to ship your telephone for warranty service.

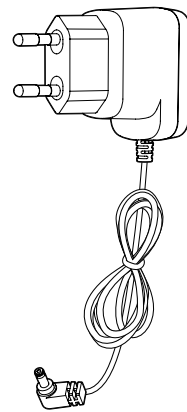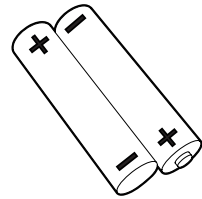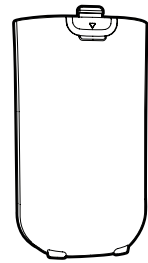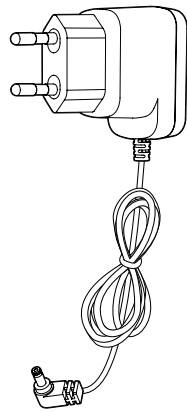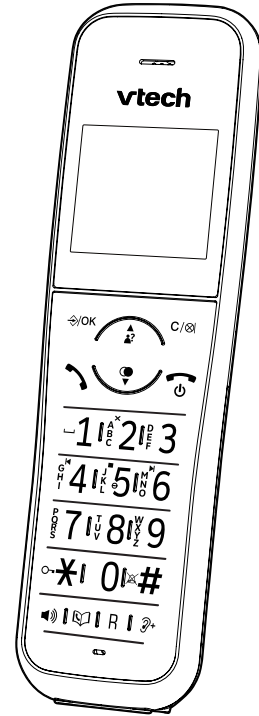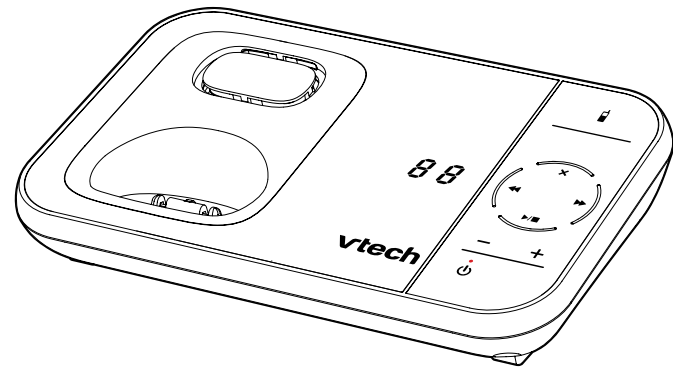




1 charger set for XS1051  
2 charger sets for XS1052  
3 charger sets for XS1053

## Connect and charge

### Install the battery

#### NOTES


- Use only the battery provided.
- Charge the battery provided with this product only in accordance with the instructions and limitations specified in this manual.
- If the handset will not be used for a long time, disconnect and remove the battery to prevent possible leakage.

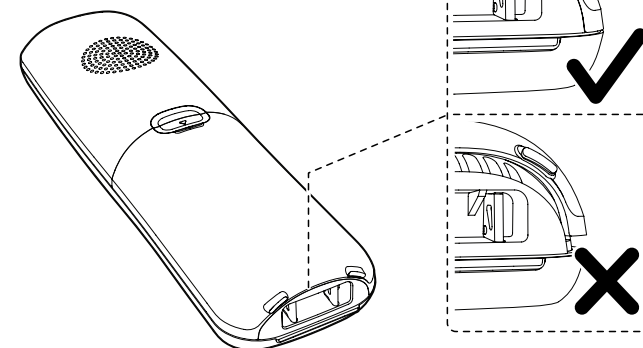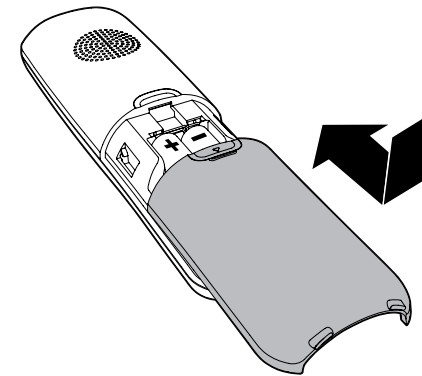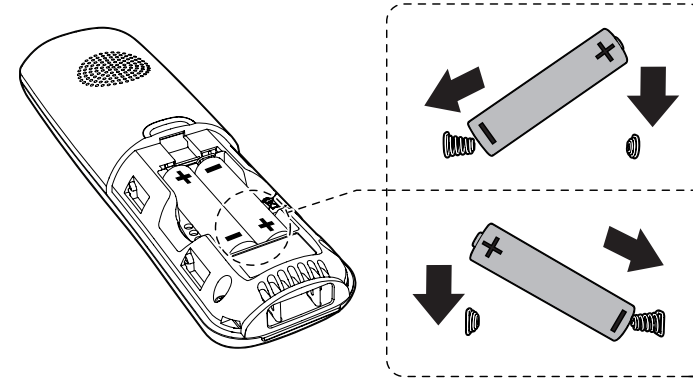


## Connect the telephone base

#### NOTES

- Use only the adapters provided.
- Make sure the electrical outlets are not controlled by wall switches.
- Connect the power adaptor in a vertical or floor mount position only. The adapter's prong is not designed to hold the weight of unit, so do not connect it to any ceiling, under-the-table, or cabinet outlets. Otherwise, the adaptor may not properly connect to the mains.

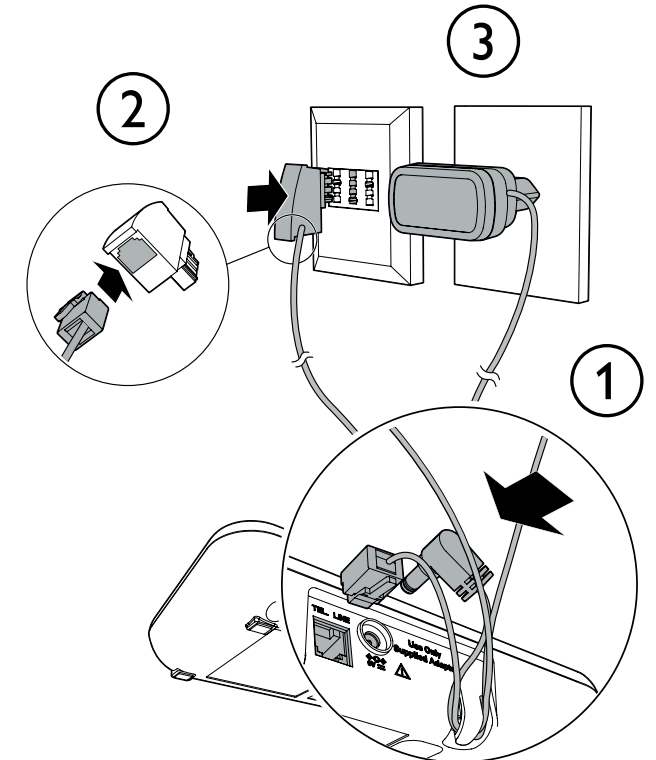


## Connect the charger

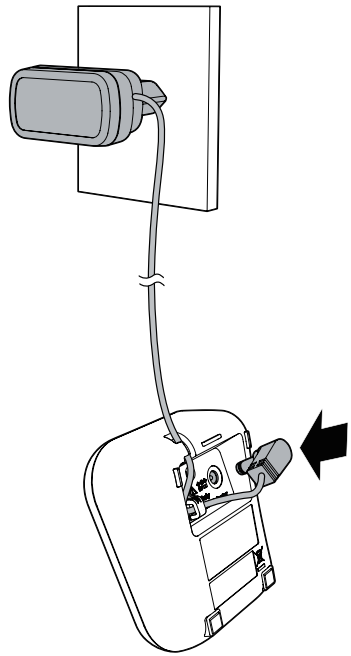
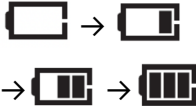



## Charge the battery

Place the handset in the telephone base or charger to charge.

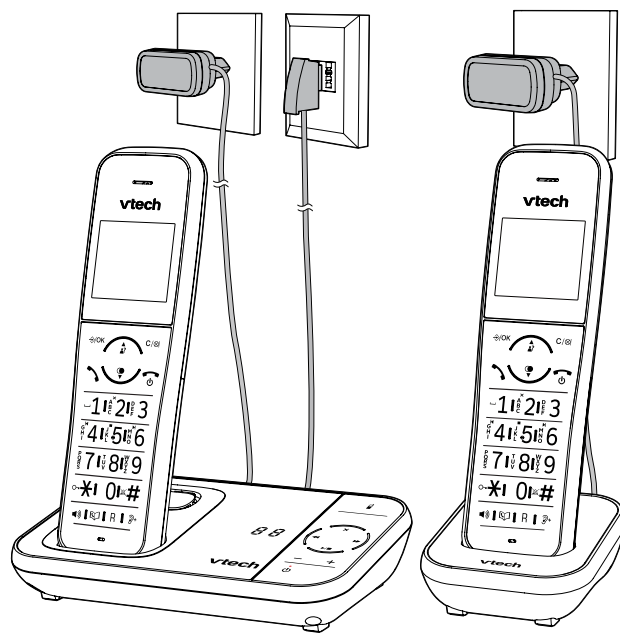

Once you have installed the battery, the handset LCD display indicates the battery status (see the table below).

Battery indicators	Battery status	Action
 flashes	Battery has no charge or very little charge. The handset cannot be used.	Charge without interruption (at least 30 minutes).
	Battery icon animates when charging.	If full battery charging is reached, the icon will stop animation in cycle even the handset is on charging cradle.
 steadily on	Battery is charged.	To keep the battery charged, place it in the telephone base or charger when not in use.

When it is fully charged, you can expect the following performance:

Operation	Operating time
While in handset use (talking*)	18 hours
While not in use (standby**)	10 days

\* Operating times vary depending on your actual use and the age of the battery.




\*\* Handset is not charging or in use.

### NOTES


- Place the handset in the charger will bypass the set date and time, and voice guide.
- For best performance, keep the handset in the charger when not in use.
- The battery is fully charged after 16 hours of continuous charging.
- If you place the handset in the charger without plugging in the battery, the screen displays **No battery**.

## Check the battery level

After you have installed the battery, check the battery level on the handset screen.

- If the battery icon is  or , then go to **Set the date and time**.
- If the screen is blank, or  flashes, then the battery needs to be charged. Go to **Charge the battery** before you do any setting or operation.

## Check for dial tone

Press . If you can hear a dial tone, the installation is successful.

### If you do not hear a dial tone

- Make sure the installation procedures described above are properly done.
- It may be a wiring problem. If you have changed your telephone service to digital service from a cable company or a VoIP service provider, the telephone line may need to be rewired to allow all existing telephone jacks to work. Contact your cable/VoIP service provider for more information.



## Set date and time

Set the date and time before using the telephone system.


1. Press  $\Rightarrow$ /OK when the phone is not in use.
2. Press  $\blacktriangledown$ / $\blacktriangle$  to choose **HS SETTINGS**, and then press  $\Rightarrow$ /OK to select.
3. Press  $\blacktriangledown$ / $\blacktriangle$  to scroll to **DATE & TIME** and then press  $\Rightarrow$ /OK to select.
4. Press  $\blacktriangledown$ / $\blacktriangle$  to scroll to **SET TIME** and then press  $\Rightarrow$ /OK to select.
5. Use the dialing keys (**0-9**) to enter the hour (**HH**) and minute (**MM**). Then, press  $\blacktriangledown$  or  $\blacktriangle$  to choose **AM** or **PM**. Then, press  $\Rightarrow$ /OK.
6. Use the dialing keys (**0-9**) to enter the year (**YY**). Then, press  $\Rightarrow$ /OK.
7. Use the dialing keys (**0-9**) to enter the date (**DD**) and month (**MM**). Then, press  $\Rightarrow$ /OK to save.

## Operating range

When the handset is out of range, the handset displays **Out of range** or **no pwr at base**.

If there is a call while the handset is out of range, it may not ring, or if it does ring, the call may not connect well when you press  $\hookrightarrow$ . Move closer to the telephone base, and then press  $\hookrightarrow$  to answer the call. If the handset moves out of range during a telephone conversation, there may be interference. To improve reception, move closer to the telephone base.

## Handset Overview

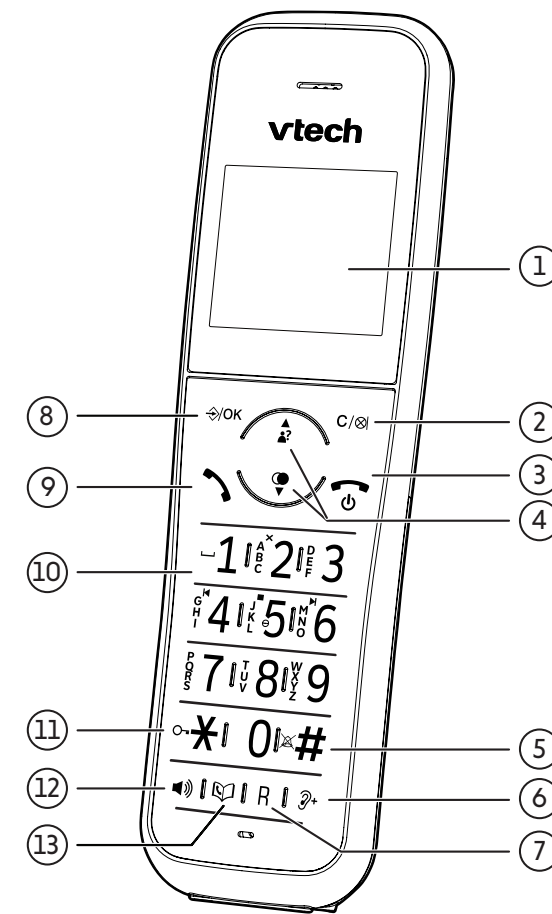


1	LCD display	
2	C/⊗	<ul style="list-style-type: none"> <li>• During a call, press to mute/unmute the microphone.</li> <li>• Press to initiate an intercom call.</li> <li>• Delete digits while predialing.</li> </ul>
3	$\hookrightarrow$	<ul style="list-style-type: none"> <li>• Hang up a call.</li> <li>• Return to the previous menu or idle mode without making changes.</li> <li>• Silence the handset ringer temporarily while the phone is ringing.</li> </ul>

4	$\blacktriangle$ ? $\blacktriangledown$	<ul style="list-style-type: none"> <li>• Press to review the call list when the telephone is not in use.</li> <li>• Press to scroll up while in a menu or reviewing the phonebook, call list, or redial list.</li> <li>• Press to increase the listening volume when on a call, or increase the message playback volume.</li> <li>• While entering names or numbers, press to move the cursor to the left.</li> </ul>
5	$\otimes$ #	<ul style="list-style-type: none"> <li>• <u>Press and hold</u> to turn the ringer on or off.</li> </ul>
6	?+	<ul style="list-style-type: none"> <li>• During a call connection, press ?+ to enhance the clarity and loudness of the voice on the handset earpiece.</li> </ul>
7	R	<ul style="list-style-type: none"> <li>• Press to activate Recall for use with Telephone Network Services such as Call Waiting during a call.</li> </ul>

8	⇒/OK	<ul style="list-style-type: none"> <li>Press to display the menu.</li> <li>Once in the menu, press to select an item or save an entry or setting.</li> </ul>
9		<ul style="list-style-type: none"> <li>Press to make or answer a call using the handset.</li> </ul>
10	1	<ul style="list-style-type: none"> <li>Enter space character during text editing.</li> </ul>
	2	<ul style="list-style-type: none"> <li>Delete messages in the answering machine.</li> </ul>
	4	<ul style="list-style-type: none"> <li>Repeat current message during message playback.</li> <li>Press twice to skip to previous message.</li> </ul>
	5	<ul style="list-style-type: none"> <li>Stop message playback.</li> </ul>
11	6	<ul style="list-style-type: none"> <li>Forward current message during message playback.</li> <li>Skip to next message.</li> </ul>
	* (lock)	<ul style="list-style-type: none"> <li>Press and hold to lock or unlock the keypad.</li> </ul>
12		<ul style="list-style-type: none"> <li>Press to turn on the handset speakerphone, press again to resume normal handset use.</li> </ul>
13		<ul style="list-style-type: none"> <li>Press to review the phonebook.</li> </ul>


## Handset display icons overview

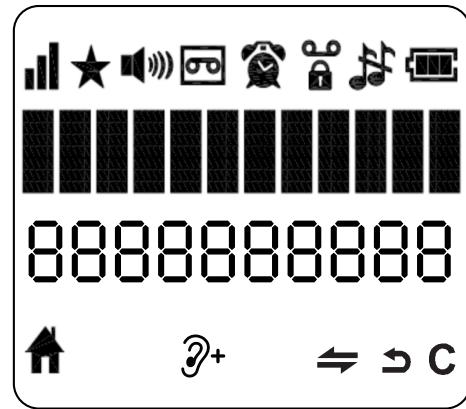

	<ul style="list-style-type: none"> <li>The battery is low and needs charging.</li> </ul>
	<ul style="list-style-type: none"> <li>Animates when battery is charging.</li> </ul>
	<ul style="list-style-type: none"> <li>On when the battery is fully charged.</li> </ul>
	<ul style="list-style-type: none"> <li>On when the handset is within the range of the base.</li> <li>Off when the handset is out of the coverage range.</li> </ul>
	<ul style="list-style-type: none"> <li>On when new call is received.</li> </ul>
	<ul style="list-style-type: none"> <li>Speakerphone is on.</li> </ul>
	<ul style="list-style-type: none"> <li>Handset ringer is off.</li> </ul>
	<ul style="list-style-type: none"> <li>On when there are new and unread voicemail messages.</li> </ul>
	<ul style="list-style-type: none"> <li>Keypad lock is on.</li> </ul>
	<ul style="list-style-type: none"> <li>Alarm alert is on.</li> </ul>


	<ul style="list-style-type: none"> <li>Steadily ON: When answering machine is on.</li> <li>Flash: When new TAM message is received.</li> </ul>
	<ul style="list-style-type: none"> <li>Line is in use.</li> <li>Flash when there is an incoming call.</li> </ul>
	<ul style="list-style-type: none"> <li>Volume booster feature is turned on.</li> </ul>
	<ul style="list-style-type: none"> <li>On when initiating an intercom call.</li> </ul>
	<ul style="list-style-type: none"> <li>Press to go back to the previous menu or cancel the current operation.</li> </ul>
	<ul style="list-style-type: none"> <li>Press to clear a character or digit.</li> <li>Press to stop the alarm.</li> <li>Press to mute or unmute during a call.</li> </ul>

## Telephone base Overview

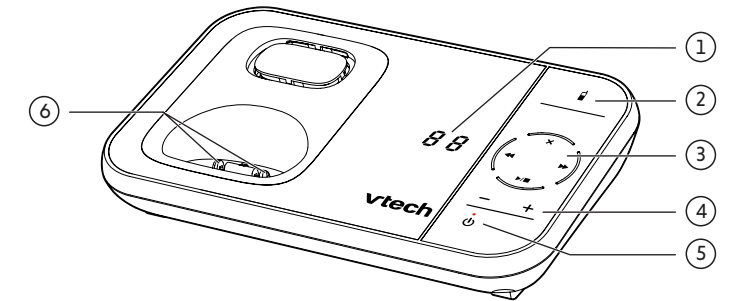

1		New message indicator / Volume indicator
2		Page all handsets.
3		Delete message.
		Skip to next message.
		<ul style="list-style-type: none"> <li>Play message.</li> <li>Stop message.</li> </ul>
4		Repeat message.
		Decrease listening volume.
5		Increase listening volume.
		<ul style="list-style-type: none"> <li>Turn on or off the answering machine.</li> <li>LED on when the answering machine is turned on.</li> </ul>
6	Charging pole	

## Charger Overview

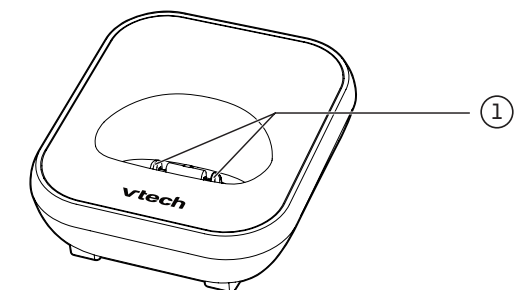

1	Charging pole
---	---------------

# Menu navigation

## In idle mode

1. Press /OK.
2. Press / of to scroll to a menu option.
3. Press /OK to select.
  - You can also press to return to previous menu.
  - Press and hold to return to idle mode.

ANS. MACHINE	CALL LIST
<ul style="list-style-type: none"><li>• MSG PLAYBACK</li><li>• DEL ALL OLD</li><li>• MEMO</li><li>• TAM ON/OFF</li><li>• TAM SETTINGS</li></ul>	Under a selected Call list entry <ul style="list-style-type: none"><li>• DETAILS</li><li>• ADD TO PB</li><li>• DELETE</li><li>• DELETE ALL</li><li>• CATEGORY</li></ul>
PHONEBOOK	BS SETTINGS
Under a selected Phonebook entry: <ul style="list-style-type: none"><li>• ADD</li><li>• VIEW</li><li>• EDIT</li><li>• DELETE</li><li>• DELETE ALL</li><li>• PB STATUS</li></ul>	<ul style="list-style-type: none"><li>• BS RINGER</li><li>• RING VOLUME</li><li>• DELETE HS</li><li>• DIAL MODE</li><li>• FLASH TIME</li><li>• CHANGE PIN</li><li>• ECO MODE</li></ul>
HS SETTINGS	REGISTRATION
<ul style="list-style-type: none"><li>• ALARM</li><li>• RING SETUP</li><li>• TONE SETUP</li><li>• LANGUAGE</li><li>• RENAME HS</li><li>• AUTO ANSWER</li><li>• DATE &amp; TIME</li></ul>	<ul style="list-style-type: none"><li>• PIN?</li></ul>
DEFAULT	
<ul style="list-style-type: none"><li>• PIN?</li></ul>	

## Make, answer or end a call

### Pre-dial a call

1. Enter the telephone number.
  - Press / to make corrections.
2. Press to dial.

### Answer a call

- Press , or
- Lift the handset to answer if **AUTO ANSWER** is on.

### End a call

- Press or place the handset in the handset charger.

### Turn the handset ringer on/off

- Press and hold #.

### Turn the keypad lock on/off

- Press and hold .

## Share call

You can use two cordless handsets at a time on an outside call.

### To make a 3-way conversation

1. Press /OK on the handset during a call.
2. Press / to select **INTERCOM**.
3. Press to answer call on destination handset.
4. Press and hold on the initiating handset.
  - **CONFERENCE** displays.

## Adjust listening volume

### To adjust the listening volume on a cordless handset

- During a call, press /.

### NOTES

- The handset and speakerphone volume settings are independent.
- When the volume reaches the minimum or maximum setting, you hear two beeps.

## Call waiting

When you subscribe to call waiting service with your telephone service provider, you hear an alert tone if there is an incoming call while you are on another call.

- Press **R** to put the current call on hold and take the new call.
- Press **R** at any time to switch back and forth between calls.

If you also subscribe to caller ID service, it will let you see the name and telephone number of the caller during call waiting.


It may be necessary to change your telephone service to use this feature. Contact your telephone service provider if:

- You have both caller ID and call waiting, but as separate service (you may need to combine these services);
- You have only caller ID service, or only call waiting service; or
- You do not subscribe to caller ID or call waiting services.

There are fees for caller ID services. In addition, services may not be available in all areas.

## Redial list


### Review a redial list entry

1. Press  to enter the redial list.
2. Press **▼/▲** repeatedly to browse until the desired entry displays.



#### NOTE

- You hear a double beep when you reach the beginning or end of the redial list.

### Store a redial number into the phonebook

1. Press  to enter the redial list.
2. Press **▼/▲** repeatedly to browse until the desired entry displays.
3. Press **⇒/OK** and then press **▼/▲** to select **ADD TO PB**.
4. Press **⇒/OK** to enter name.
5. Press **⇒/OK** to enter number.
6. Press **⇒/OK** and then press **▼/▲** to select **MELODY 1** to **MELODY 10**.
7. Press **⇒/OK** to confirm.


### Redial a call from list

1. Press  to enter the redial list.
2. Press **▼/▲** repeatedly to browse until the desired entry displays.
3. Press  to dial.


#### NOTE

- If there is no number in the list, the display shows **EMPTY**.

### Delete a redial list entry

1. Press  to enter the redial list.
2. Press **▼/▲** repeatedly to browse until the desired entry displays.
3. Press **⇒/OK**, and then press **▼/▲** to select **DELETE**.
4. Press **⇒/OK** twice to confirm.


### Delete all redial entries

1. Press  to enter the redial list.
2. Press **▼/▲** repeatedly to browse until the desired entry displays.
3. Press **⇒/OK**, and then press **▼/▲** to select **DELETE ALL**.
4. Press **⇒/OK** twice to confirm.

## Find handset

This feature helps you find all system handsets.

#### CAUTIONS

- Do not press and hold  for more than four seconds. It may lead to handset deregistration.
- If the handset displays **To register HS...** and **...see manual**, refer to **Frequent asked questions** to register the handset back to the telephone base.




### To start paging

- Press  on the telephone base.
- All idle handsets ring and display **PAGING**.

#### NOTE

- Paging tone continues on the other handset.







### To end paging

- Press  again on the telephone base;
- Press , **C/⊗**,  on the handset; **or**
- Place the handset in the handset base / charger.

#### NOTE

- Paging tone stops when paging stops.

















## Use the phone menu

1. Press /OK when the phone is not in use.
2. Press / until the screen displays the desired feature menu.
3. Press /OK to select and enter the menu.
  - To return to the previous menu, press /ⓧ on the phone.
  - To return to idle mode, press and hold /ⓧ on the phone.

## Phonebook




The phonebook can store up to 100 entries. Each entry may consist of a telephone number up to 24 digits, and a name up to 12 characters.

 









### Add a phonebook entry

1. Press /OK, and then press / to choose **PHONEBOOK**. Press /OK to confirm.
  - If you have entries in the list, they will be displayed. Press /OK and **ADD** displays.
  - If there is no entry in the list, the display shows **EMPTY**. Press /OK and **ADD** displays.
2. Press /OK again to add entry.
  - **NAME** displays.
3. Enter the name of the phonebook entry.
  - Press /OK to confirm.
  - Press **-1** to add a space.
  - Press /ⓧ to delete.
  - **NUMBER** displays.
4. Press /OK, and then enter the telephone number of the entry.
  - Press /OK to confirm.
  - Press /ⓧ to delete.
  - **MELODY 1** displays.
5. Press / to select your preferred ringtone from **MELODY 1** to **MELODY 10**.
6. Press /OK to confirm the entry.
  - Press /ⓧ to delete.

## Review the phonebook entries

Entries are sorted alphabetically.






1. Press  when the cordless handset is not in use.
  - The screen displays the first entry.
2. Press / to browse through the entries, or use the dialing keys to start a name search.







 

**-OR-**
1. Press /OK when the phone is not in use.
2. Press / to choose **PHONEBOOK**, and then press /OK to select.
3. The screen displays the first entry. Press / to browse through the entries.
4. Press /OK when the desired entry displays.
5. Press / to choose **VIEW**, and then press /OK to select.

### NOTE




- You hear a double beep when you reach the beginning or end of the list.

## Check number of phonebook entry used

1. Press  when the cordless handset is not in use.
2. Press /OK again and then press / to choose **PB STATUS**.
3. Press /OK again to select.
  - e.g. **09/100 USED** displays.

**-OR-**
1. Press /OK when the phone is not in use.
2. Press / to choose **PHONEBOOK**, and then press /OK to select.
  - The screen displays the first entry in the phonebook.
3. Press /OK and then / to choose **PB STATUS**.
4. Press /OK again to select.
  - e.g. **09/100 USED** displays.

## Dial a phonebook entry

1. Search for the desired entry in the phonebook (see **Review the phonebook entries**).
2. Press / to select the desired entry and then press  to dial.

## Edit a phonebook entry

1. Search for the desired entry in the phonebook (see **Review the phonebook entries**).
2. When the desired entry displays, press  $\Rightarrow$ /OK to select.
  - **ADD** displays.
3. Press  $\blacktriangledown$ / $\blacktriangle$  to select **EDIT**, and then press  $\Rightarrow$ /OK to select.
  - Press C/ $\otimes$  to delete the name and number.
  - Re-enter new name and number and select the ringer melody.
  - Press  $\Rightarrow$ /OK to save.
  - You hear a confirmation tone.

## Delete a phonebook entry/all entries

1. Search for the desired entry in the phonebook (see **Review the phonebook entries**).
2. When the desired entry displays, press  $\Rightarrow$ /OK to select.
  - **ADD** displays.
3. Press  $\blacktriangledown$ / $\blacktriangle$  to select **DELETE**, and then press  $\Rightarrow$ /OK twice to select and confirm.
  - The entry is deleted, and you hear a confirmation tone.

### NOTE

- If you want to delete all phonebook entries, press  $\blacktriangledown$ / $\blacktriangle$  to select **DELETE ALL** instead of **DELETE**.

## Call list

This feature is available if you have subscribed to the Caller ID service from your local service provider telephone company.

The call list can store up to 20 entries. Each entry may consist of a telephone number up to 24 digits, and a name up to 12 characters. Both answered and unanswered calls will be stored in the call list.

Voicemail calls received from your telephone service provider will also be saved in the call list.

## Review the call list

Review the call list to find out who called, to return the call, or to copy the caller's name and number into your phonebook. Latest call is put at the top of the call list. When the call list is full, the oldest call will be replaced by a new call. The unanswered call which has not been read is marked with a  $\ast$ .

1. Press  $\blacktriangle$ ? when the phone is not in use.
  - **OR** -
  - Press  $\Rightarrow$ /OK and  $\blacktriangledown$ / $\blacktriangle$  to select **CALL LIST**. Press  $\Rightarrow$ /OK to confirm.
    - The screen displays the first entry in the call list.
2. Press  $\blacktriangledown$ / $\blacktriangle$  to browse. When the desired entry displays, press  $\Rightarrow$ /OK to select.
  - The screen displays **DETAILS**.
3. Press  $\Rightarrow$ /OK to review the details.
  - The screen displays the caller's name and the date and time of the call.
  - Press \* will toggle between the caller's number and name.


## Save a call list entry to the phonebook

1. Search for the desired call list entry (see **Review the call list**).
2. When the desired entry displays, press  $\Rightarrow$ /OK to select.
  - The screen displays **DETAILS**.
3. Press  $\blacktriangledown$ / $\blacktriangle$  to choose **ADD TO PB**, and then press  $\Rightarrow$ /OK to select.
  - The screen displays the telephone number.
4. Use the dialing keys to enter the name, and then press  $\Rightarrow$ /OK to save.
  - The name and number display.
  - Use the dialing keys to edit the number, if necessary.
5. Press  $\Rightarrow$ /OK to save.
  - **MELODY 1** displays.
6. Press  $\blacktriangledown$ / $\blacktriangle$  to select your preferred ringtone from **MELODY 1** to **MELODY 10**.
7. Press  $\Rightarrow$ /OK to save.
  - You hear a confirmation tone.

## While entering names and numbers

- Press  $\blacktriangledown$ / $\blacktriangle$  to move the cursor to the left or right.
- Press C/ $\otimes$  to erase a digit.
- Press and hold C/ $\otimes$  to erase all digits.
- Press  $\text{-}1$  to add a space.

## Dial a call list entry

1. Search for the desired call list entry (see **Review the call list**).
2. When the desired entry displays, press  to dial.

## Delete a call list entry

1. Search for the desired call list entry (see **Review the call list**).
2. When the desired entry displays, press  $\Rightarrow$ /OK to select.
  - Press  $\blacktriangledown$ / $\blacktriangle$  to until the screen displays **DELETE**. Press  $\Rightarrow$ /OK twice to select and confirm.
  - The entry is deleted, and you hear a confirmation tone.

### NOTE

- If you want to delete all call list entries, press  $\blacktriangledown$ / $\blacktriangle$  to select **DELETE ALL** instead of **DELETE**.

## Set the type of calls to be stored in the call list

1. Press when the phone is not in use.  
- OR -  
Press and to select **CALL LIST**. Press to confirm.
2. Press to display the options. Press to select **CATEGORY**, and then press to confirm.
3. Press to select **ALL CALLS** or **MISSED CALLS**.
4. Press to save.

### NOTE

- **ALL CALLS** will store the calls of answered calls and unanswered calls. **MISSED CALLS** will only store those unanswered calls.

## Retrieve voicemail

When you received a voicemail, the handset displays **New voicemail** and/or .

To retrieve, you typically dial an access number provided by your telephone service provider, and then enter a security code. Contact your telephone service provider for instructions on how to configure the voicemail settings and listen to messages.

### NOTE

- After you have listened to all new voicemail messages, the indicators on the screen turn off automatically.

## Answering machine

### Message playback

If you have new messages, the telephone plays only the new messages (oldest first). If there are no new messages, the telephone plays back all messages (oldest first).

### NOTE

- Make sure you **Set date and time** correctly.
1. Press when the phone is not in use.
  2. Press to select **ANS. MACHINE**.
  3. Press again to select **MSG PLAYBACK**.
    - If there is no message, the the display shows **TAM EMPTY** and returns to previous menu option
    - If there is a message, the displays shows the date and time (10-21 11-05), i.e. on October 21st and at 11:05 am, following the date and time format selected in **DATE & TIME** settings (See **Handset settings**).
    - Press to control the playback.

The first received message will play first, while the new voice message is indicated by a icon. Once the message is played, it will be saved automatically and the icon will disappear.

## Control the playback

### Using the handset:

1. Press when the phone is not in use.
2. Press to select **ANS. MACHINE**.
3. Press again to select **MSG PLAYBACK**.
4. Press to displays **STOP, FORWARD, PREVIOUS, and DELETE** options.  
You can also press the keys on your handset to control.
  - **STOP** ( 5) - Message playback stops and return to previous menu.
  - **FORWARD** ( 6) - Play the next new message if available.
  - **PREVIOUS** ( 4) - Play the current message from the beginning.
  - **DELETE** ( 2) - Delete currently play message and continue to play the next message if available. If there is no more message, it will return to previous menu option.
  - You can adjust the volume by pressing .

### Using the telephone base:

- Press ►/■ to start or stop message playback.
- Press ►► to play the next new message if available.
- Press ◀◀ to play the current message from the beginning.
- Press ✕ to delete currently play message and continue to play the next message if available.
- Pressing + / - to adjust the volume.

### Delete all messages

If you want to delete all the old messages, you can:

#### Using the handset:

1. Press ⇨/OK when the phone is not in use.
2. Press ⇨/OK to select **ANS. MACHINE**.
3. Press ▼/▲ to scroll to **DEL ALL OLD**, and press ⇨/OK.
  - The display shows **CONFIRM?**
4. Select and press ⇨/OK to confirm, or C/⊗ to return to previous menu option.

#### Using the telephone base:

- When the telephone is not in use, press and hold ✕ to delete all messages.

### Message indicator on base

Display	Description
OF-> --	Answering machine is <b>OFF</b> .
--	Answering machine is <b>OFF</b> and no new answering machine messages received.
OF /XX	Flashing <b>XX</b> alternatively with <b>OF</b> : Answering machine is <b>OFF</b> and there are <b>XX</b> new voice messages received where <b>XX</b> is from <b>01</b> to <b>59</b> .
On-> XX	Answering machine is <b>ON</b> and <b>XX</b> is the number of messages in the answering machine memory.
00	Steadily on: No voice messages in the answering machine.
XX	Flash: There are <b>XX</b> new voice messages received where <b>XX</b> is from <b>01</b> to <b>59</b> .
	Steadily on: Playing the current <b>XX</b> incoming old message. Flashing: Playing the current <b>XX</b> incoming new message.
ZZ	Steadily on: There are <b>ZZ</b> old voice messages kept in the answering machine memory (no new voice messages).
XX/FF	Flashing <b>XX</b> alternatively with <b>FF</b> : There are <b>XX</b> new voice messages received where <b>XX</b> is from <b>01</b> to <b>59</b> and the answering machine memory is full.
FF	Flashing <b>FF</b> : The answering machine memory is full and there are no new messages, and only old messages are kept.
-- /XX	Flashing <b>XX</b> alternatively with - -: Time is not set and there are <b>XX</b> new voice messages received where <b>XX</b> is from <b>01</b> to <b>59</b> .



Display	Description
--	Flashing - -: Time is not set and there are old voice messages kept in the the answering machine memory only (no new voice messages).
A1/A2	Steadily on: Playing the current outgoing message (OGM) where <b>A1</b> is the Answer & Record OGM and <b>A2</b> is the Answer Only OGM.
XX/An	Flashing <b>XX</b> alternatively with <b>An</b> : <b>XX</b> new incoming message is now recording. <b>An</b> denotes that the incoming message recording is in progress.
rA	Flashing: Remote access is in progress.
LX	Steadily on: Indicate the current volume level where <b>X</b> is from <b>1</b> to <b>8</b> (non-cyclic).

### Record memo

Regardless the answering machine is on or off, you can record memos as reminders for yourself.

1. Press ⇨/OK when the phone is not in use.
2. Press ⇨/OK to select **ANS. MACHINE**.
3. Press ▼/▲ to scroll to **MEMO**, and press ⇨/OK. It will start recording.
  - Select and press ⇨/OK to stop and save the recording, or
  - Select and press C/⊗ to stop the recording without saving and then to return to previous menu option.

### Call intercept

To talk to the person whose message is being recorded, you can press  or  on the handset.



## Remote access

Your phone lets you check your messages, or otherwise operate your answering machine, by calling the answering machine when you are away from home and then dialling a 4-digit remote access PIN from a tone-dialling phone. The 4-digit remote access PIN code is used to prevent other people from unauthorised access of your answering machine.

Make sure that Remote Access is turned on (see **Turn on/off remote access** section) and then you can ring your phone from another tone-dialling phone to switch the answering machine on or off, and/or listen to your messages remotely.

### Access your answering machine remotely:

1. Place a call from a tone-dialling phone to your phone.
2. When the answering machine answers the call and starts playing the outgoing message, press the \* key. The outgoing message will stop playing.
3. Enter the 4-digit Remote Access PIN (default PIN is **0000**). You will hear a single confirmation beep if the PIN is accepted, and you then need to press **5** to start playing any messages.

### NOTES

- The \* must be entered while the

outgoing message is still playing, and the 4-digit PIN should follow without any delays.

- If the 4-digit Remote Access PIN is entered incorrectly you will hear three error beeps, and you can try again, but if it happens three times consecutively, the line will be released automatically.
4. Press the following keys to carry out your desired function.

Keys	Functions	
	While message is not playing	While message is playing
2		Delete the current message playing.
4		Press once to repeat the current message from the beginning. Press twice to skip back to play the previous message.
5	Start playing messages.	Stop the current message playback.
6		Skip to play the next message.
7	Turn on the answering machine.	
8		Stop the current message playback.
9	Turn off the answering machine.	

 






 




### NOTES

- If your answering machine is turned off but Remote Access is turned on, the phone will enter into the remote access mode after 14 rings and play the **ANSWER ONLY** outgoing message.
- You can then enter the \* key and the 4-digit remote access PIN (Default PIN: **0000**) to activate the remote access feature. When your answering machine memory is full and the answer mode is set to Answer & Record, the answer mode will change to Answer Only automatically. It will change back to **ANS & REC** (Answer & Record) mode automatically after some messages have been deleted.


## Turn on/off the answering machine

By default, your answering machine is ON. You can select to turn on or off the system.

### Using the handset:

1. Press /OK when the phone is not in use.
2. Press /OK to select **ANS. MACHINE**.
3. Press / to scroll to **TAM ON/OFF**, and press /OK.
4. Press / to scroll to **ON** or **OFF**.
5. Select **ON** and press /OK to turn on the system. The  icon displays when idle.  
**-OR-**  
Select **OFF** and press /OK to turn off the system, and the  icon disappear when idle.
  - Press /⊗ to return to previous menu option.

### Using the telephone base:

- Press  to turn on or off the answering machine.

# Handset settings

## Set languages

The LCD language is preset to German. You can select English, French, Italian, Spanish, Portuguese or Dutch to be used in all screen displays.

1. Press ⇨/OK when the phone is not in use.
2. Press ▼/▲ to choose **HS SETTINGS**, and then press ⇨/OK to select.
  - **ALARM** displays.
3. Press ▼/▲ to scroll to **LANGUAGE**, and then press ⇨/OK to select.
4. Press ▼/▲ to choose **ENGLISH, DEUTSCH, FRANÇAIS, ITALIANO, ESPAÑOL, PORTUGUÊS** or **NEDERLANDS**, and then press ⇨/OK to select.
  - The screen returns to the previous menu.
  - You hear a confirmation tone.

## Set date and time

1. Press ⇨/OK when the phone is not in use.
2. Press ▼/▲ to choose **HS SETTINGS**, and then press ⇨/OK to select.
3. Press ▼/▲ to scroll to **DATE & TIME** and then press ⇨/OK to select.
4. Press ▼/▲ to scroll to
  - **DATE FORMAT**
  - **TIME FORMAT**
  - **SET TIME**

## Set date format

1. Follow **Set date and time** and reach **DATE FORMAT**. Press ⇨/OK to select.
2. Press ▼/▲ to choose **DD-MM-YY** or **MM-DD-YY** format.
3. Press ⇨/OK to save.

## Set time format

1. Follow **Set date and time** and reach **TIME FORMAT**. Press ⇨/OK to select.
2. Press ▼/▲ to choose **12HR** or **24HR** format.
3. Press ⇨/OK to save.

## Set date and time

1. Follow **Set date and time** and reach **SET TIME**. Press ⇨/OK to select.
2. Use the dialing keys (**0-9**) to enter the hour (**HH**) and minute (**MM**). Press ⇨/OK to save.
3. Use the dialing keys (**0-9**) to enter the year (**YYYY**), and then press ⇨/OK to save.
4. Use the dialing keys (**0-9**) to enter the date (**DD**) and month (**MM**). Then, press ⇨/OK to save.
  - The screen returns to the previous menu.
  - You hear a confirmation tone.

## Ringer

1. Press ⇨/OK when the phone is not in use.
2. Press ▼/▲ to choose **HS SETTINGS**, and then press ⇨/OK to select.
3. Press ▼/▲ to choose **RING SETUP**, and then press ⇨/OK to select. There are 3 options:
  - **EXT. RING** - External call ringtone
  - **INT. RING** - Internal call ringtone
  - **RING VOLUME** - Ringer volume

## Set ringer melody

You can choose from different ringer melody for each handset.

1. Follow **Ringer** and reach **RING SETUP** option.
2. Press ▼/▲ to choose **EXT. RING** or **INT. RING**.
3. Press ⇨/OK.
4. Press ▼/▲ to select your preferred ringtone from **MELODY1** to **MELODY 10**.
  - ⌘ displays next to the current selection.
5. Press ⇨/OK to save.
  - You hear a confirmation tone.

## Set ringer volume

You can set the ringer volume or turn the ringer off on each handset.

When the ringer is off, 🎵 appears on the screen.

1. Follow **Ringer** and reach **RING SETUP** option.
2. Press ▼/▲ to choose **RING VOLUME**, and then press ⇨/OK to select.
3. Press ▼/▲ to select from **VOLUME OFF** to **VOLUME 5**, and then press ⇨/OK to select and save.
  - ⌘ displays next to the selection.
  - You hear a confirmation tone.

## NOTE

- If the ringer volume is set to off, that handset is silenced for all incoming calls except paging tone.

## Tone settings

### Set key tone on/off

You can turn the key tone on or off for each handset. If you turn the key tone off, there are no beeps when you press the keys.

1. Press ⇨/OK when the phone is not in use.
2. Press ▼/▲ to choose **HS SETTINGS**, and then press ⇨/OK to select.
3. Press ▼/▲ to choose **STONE SETUP**, and then press ⇨/OK to select.
  - **KEYTONE** displays.
4. Press ⇨/OK to select.
5. Press ▼/▲ to choose **ON** or **OFF**.
6. Press ⇨/OK to save.
  - The screen returns to the previous menu.
  - You hear a confirmation tone.

### Set alert tones on/off

1. Press ⇨/OK when the phone is not in use.
2. Press ▼/▲ to choose **HS SETTINGS**, and then press ⇨/OK to select.
3. Press ▼/▲ to choose **STONE SETUP**, and then press ⇨/OK to select.
4. Press ▼/▲ to choose **BATTERY TONE** or **OUT OF RANGE**.
5. Press ⇨/OK to select.
6. Press ▼/▲ to choose **ON** or **OFF**.
7. Press ⇨/OK to save.

## Alarm

### Set alarm on/off and alarm time

You can set the ALARM alert with handset.

#### Set alarm on:

1. Press ⇨/OK when the phone is not in use.
2. Press ▼/▲ to choose **HS SETTINGS**, and then press ⇨/OK to select.
3. Press ⇨/OK to select **ALARM**.
4. Press ▼/▲ to choose **ON** and then press ⇨/OK to select.
  - The screen displays **00-00**.
5. Enter the alarm time (in 12-hour or 24-hour setting, as set in the **TIME FORMAT** setting).
  - The screen displays **SNOOZE**, and press ⇨/OK to select it.
6. Press ▼/▲ to choose **ON** or **OFF**.
  - The screen returns to the previous menu. You hear a confirmation tone.

#### Set alarm off:

1. Press ⇨/OK when the phone is not in use.
2. Press ▼/▲ to choose **HS SETTINGS**, and then press ⇨/OK to select.
3. Press ⇨/OK to select **ALARM**.
4. Press ▼/▲ to choose **OFF**.
5. Press ⇨/OK to select.

## Rename handset

You can rename the handset for your easy reference with the base.

1. Press ⇨/OK when the phone is not in use.
2. Press ▼/▲ to choose **HS SETTINGS**, and then press ⇨/OK to select.
3. Press ▼/▲ to choose **RENAME HS**, and then press ⇨/OK to select.
  - **HANDSET \_** displays; \_ cursor flashes and you can rename the handset.
  - Press C/⊗ to delete a character or digit.
4. Press ⇨/OK to save.

## Set auto answer

You can set your handset to auto answer the call once you lift it from the base.

1. Press ⇨/OK when the phone is not in use.
2. Press ▼/▲ to choose **HS SETTINGS**, and then press ⇨/OK to select.
3. Press ▼/▲ to choose **AUTO ANSWER**, and then press ⇨/OK to select.
4. Press ▼/▲ to choose **ON** or **OFF**.
5. Press ⇨/OK to save.
  - Press C/⊗ to return to previous menu.

## Base settings

### Ringer

1. Press ⇨/OK when the phone is not in use.
2. Press ▼/▲ to choose **BS SETTINGS**, and then press ⇨/OK to select.
3. Press ⇨/OK to select **BS RINGER**.
4. Press ▼/▲ to select your preferred ringtone from **MELODY 1** to **MELODY 5**.
  - ⌘ displays next to the current selection.
5. Press ⇨/OK to save.
  - You hear a confirmation tone.

### Set ringer volume

You can set the ringer volume or turn the ringer off.

1. Press ⇨/OK when the phone is not in use.
2. Press ▼/▲ to choose **BS SETTINGS**, and then press ⇨/OK to select.
3. Press ▼/▲ to choose **RING VOLUME**, and then press ⇨/OK to select.
4. Press ▼/▲ to select from **VOLUME OFF** to **VOLUME 5**, and then press ⇨/OK to select and save.
  - ⌘ displays next to the current selection.

## Delete handset

1. Press  $\Rightarrow$ /OK when the phone is not in use.
2. Press  $\blacktriangledown$ / $\blacktriangle$  to choose **BS SETTINGS**, and then press  $\Rightarrow$ /OK to select.
3. Press  $\blacktriangledown$ / $\blacktriangle$  to choose **DELETE HS**, and then press  $\Rightarrow$ /OK to select.
  - **PIN?** - - - - displays; - - - - cursor flashes.
  - Default 4-digit PIN is **0000**.
  - Press C/ $\otimes$  to delete.
  - The PIN will be masked as  $\ast\ast\ast\ast$ .
4. Enter the 4-digit PIN and then press  $\Rightarrow$ /OK to confirm.
5. Press  $\blacktriangledown$ / $\blacktriangle$  to choose the desired handset to be deleted, and then press  $\Rightarrow$ /OK to confirm.
  - Return to previous menu.
  - The deleted handset will be removed from the registered handsets list, and the antenna icon will disappear. **REGISTER** displays.

### NOTE

- If the PIN is incorrect, the screen returns to the previous menu.

## Set dial mode

The dial mode is preset to touch-tone dialing. If you have pulse (rotary) service, you need to change the dial mode to pulse dialing before using the telephone to make a call.

1. Press  $\Rightarrow$ /OK when the phone is not in use.
2. Press  $\blacktriangledown$ / $\blacktriangle$  to choose **BS SETTINGS**, and then press  $\Rightarrow$ /OK to select.
3. Press  $\blacktriangledown$ / $\blacktriangle$  to choose **DIAL MODE**, and then press  $\Rightarrow$ /OK to select.
4. Press  $\blacktriangledown$ / $\blacktriangle$  to choose **TONE** or **PULSE**, and then press  $\Rightarrow$ /OK to select.
  - $\ast\ast$  displays next to the selection.
  - The screen returns to the previous menu.
  - You hear a confirmation tone.

## Change length of flash time

1. Press  $\Rightarrow$ /OK when the phone is not in use.
2. Press  $\blacktriangledown$ / $\blacktriangle$  to choose **BS SETTINGS**, and then press  $\Rightarrow$ /OK to select.
3. Press  $\blacktriangledown$ / $\blacktriangle$  to choose **FLASH TIME**, and then press  $\Rightarrow$ /OK to select. There are 3 options:
  - **SHORT**
  - **MEDIUM**  $\ast\ast$  (by default)
  - **LONG**
4. After you have selected, press  $\Rightarrow$ /OK to confirm and save.
  - You hear a confirmation tone.

## Change the system PIN

1. Press  $\Rightarrow$ /OK when the phone is not in use.
2. Press  $\blacktriangledown$ / $\blacktriangle$  to choose **BS SETTINGS**, and then press  $\Rightarrow$ /OK to select.
3. Press  $\blacktriangledown$ / $\blacktriangle$  to choose **CHANGE PIN**, and then press  $\Rightarrow$ /OK to select.
  - **OLD PIN?** - - - - displays; - - - - cursor flashes.
  - Default 4-digit PIN is **0000**.
  - Press C/ $\otimes$  to delete.
  - The PIN will be masked as  $\ast\ast\ast\ast$ .
4. Enter the current 4-digit PIN and then press  $\Rightarrow$ /OK to confirm.
  - If the old PIN is correct, it will show **NEW PIN?** - - - - with - - - - cursor flashes.
5. Enter the new PIN, and press  $\Rightarrow$ /OK.
6. Re-enter the new PIN to double confirm.
7. Press  $\Rightarrow$ /OK to save.

## Turn on/off ECO mode

You can reduce transmission power by setting the ECO mode.

1. Press  $\Rightarrow$ /OK when the phone is not in use.
2. Press  $\blacktriangledown$ / $\blacktriangle$  to choose **BS SETTINGS**, and then press  $\Rightarrow$ /OK to select.
3. Press  $\blacktriangledown$ / $\blacktriangle$  to choose **ECO MODE**, and then press  $\Rightarrow$ /OK to select.
4. Press  $\blacktriangledown$ / $\blacktriangle$  to choose **ON** or **OFF**.
  - **OFF**  $\ast$  is the default setting.
5. Press  $\Rightarrow$ /OK to save.
  - Press C/ $\otimes$  to return to previous menu.

## Register a handset

When your handset is deregistered from the telephone base, follow the steps below to register it back to the telephone base.

1. Remove the handset from the telephone base.
2. Press  $\Rightarrow$ /OK when the phone is not in use.
3. Press  $\blacktriangledown$ / $\blacktriangle$  to choose **REGISTRATION**, and then press  $\Rightarrow$ /OK to select.
  - **PIN?** - - - - displays; - - - - cursor flashes.
4. Enter the 4-digit system PIN, and press  $\Rightarrow$ /OK. (Default: **0000**)

Press and hold  at the telephone base for about five seconds.

- **PLEASE WAIT** displays.
- **REGISTER!** displays if the handset fails to register to the base.
- If handset is registered to the base successfully, the base will assign next available handset number to the handset automatically.
- You hear a beep when the registration process completes.
- The registration process takes about 60 seconds complete.

### NOTE

- If your handset is new, make sure you charge it before attempting registration.

## Reset phone settings

You can reset your phone to the default settings. After reset, all settings and entries (except **phonebook**) will be deleted.

1. Press  $\Rightarrow$ /OK when the phone is not in use.
2. Press  $\blacktriangledown$ / $\blacktriangle$  to choose **DEFAULT**, and then press  $\Rightarrow$ /OK to select.
  - **PIN?** - - - - displays; - - - - cursor flashes.
3. Enter the 4-digit system PIN, and press  $\Rightarrow$ /OK. (Default: **0000**)
4. Press  $\Rightarrow$ /OK to confirm.

## Answering machine and settings

### Set your built-in answering machine

The answering machine can record and store up to 99 messages. Each message can be up to three minutes in length. The total storage capacity for the outgoing message, messages and memos is approximately 30 minutes. The actual recording time depends on individual message characteristics.

Your answering machine allows you to set your outgoing message, to save and delete messages, activate call screening, to set number of rings before pick up, and to access remotely.

### NOTE

- Make sure you **Set date and time** correctly.

## Set the answer mode

The answering machine has two types of answer mode. One is **ANS & REC**, and the other one is **ANSWER ONLY**.

**ANS & REC** is the default setting, and it answers the calls and allows callers to leave a message. **ANSWER ONLY**, on the other hand, only answer the calls but it does not allow callers to leave any messages. It will prompt callers to call back later.

1. Press  $\Rightarrow$ /OK when the phone is not in use.
2. Press  $\Rightarrow$ /OK to select **ANS. MACHINE**.
3. Press  $\blacktriangledown$ / $\blacktriangle$  to scroll to **TAMSETTINGS**, and press  $\Rightarrow$ /OK to select.
4. Press  $\Rightarrow$ /OK to select **ANSWER MODE**.
5. Press  $\blacktriangledown$ / $\blacktriangle$  to select **ANS & REC** or **ANSWER ONLY**.
6. Press  $\Rightarrow$ /OK to confirm.

## Select the answering machine language

1. Press  $\Rightarrow$ /OK when the phone is not in use.
2. Press  $\Rightarrow$ /OK to select **ANS. MACHINE**.
3. Press  $\blacktriangledown$ / $\blacktriangle$  to scroll to **TAMSETTINGS**, and press  $\Rightarrow$ /OK to select.
4. Press  $\blacktriangledown$ / $\blacktriangle$  to scroll to **TAM LANGUAGE**, and press  $\Rightarrow$ /OK to select. Select from the following languages:
  - **ENGLISH**;
  - **DEUTSCH**; and
  - **FRANCAIS**.

## Default outgoing message

The telephone is preset with a greeting that answers calls with "Hello. Your call cannot be taken at the moment. So please leave your message after the tone." You can use this preset outgoing message, or replace it with your own.

## Record your own outgoing message

1. Press  $\Rightarrow$ /OK when the phone is not in use.
2. Press  $\Rightarrow$ /OK to select **ANS. MACHINE**.
3. Press  $\nabla$ / $\blacktriangle$  to scroll to **TAM SETTINGS**, and press  $\Rightarrow$ /OK to select.
4. Press  $\nabla$ / $\blacktriangle$  to scroll to **OGM SETTINGS**, and press  $\Rightarrow$ /OK to select.
5. Press  $\nabla$ / $\blacktriangle$  to scroll to **ANS & REC** or **ANSWER ONLY** and press  $\Rightarrow$ /OK to select.
6. Press  $\nabla$ / $\blacktriangle$  to scroll to **RECORD MESS**, and press  $\Rightarrow$ /OK to select.
7. During **RECORDING**, select and press  $\Rightarrow$ /OK to stop and save the recording and return to previous menu option.
  - Select and press C/⊗ to stop the recording without saving and return to previous menu option.
  - Maximum recording length is 3 minutes.

## Play and delete your outgoing message

1. Press  $\Rightarrow$ /OK when the phone is not in use.
2. Press  $\Rightarrow$ /OK to select **ANS. MACHINE**.
3. Press  $\nabla$ / $\blacktriangle$  to scroll to **TAM SETTINGS**, and press  $\Rightarrow$ /OK to select.
4. Press  $\nabla$ / $\blacktriangle$  to scroll to **OGM SETTINGS**, and press  $\Rightarrow$ /OK to select.
5. Press  $\nabla$ / $\blacktriangle$  to scroll to **ANS & REC** or **ANSWER ONLY**, and press  $\Rightarrow$ /OK to select.
6. Press  $\nabla$ / $\blacktriangle$  to scroll to **PLAYBACK**, and press  $\Rightarrow$ /OK to select.
7. During **PLAYING**, select  $\Rightarrow$ /OK to stop the outgoing message playback and return to previous menu option.
  - Select C/⊗ to delete your outgoing message and return to previous menu option.
  - Default outgoing message cannot be deleted.

### NOTE

- After you deleted your own recorded outgoing message, the answering machine answers calls with the default outgoing message.

### Options during playback

- Press  $\nabla$ / $\blacktriangle$  on the cordless handset to adjust the listening volume.
- Press  $\blacktriangle$ ) to switch between the speakerphone and handset earpiece.

## Set answer delay

Use this feature to set the number of rings for the answering machine to pick up the incoming call.

1. Press  $\Rightarrow$ /OK when the phone is not in use.
2. Press  $\Rightarrow$ /OK to select **ANS. MACHINE**.
3. Press  $\nabla$ / $\blacktriangle$  to scroll to **TAM SETTINGS**, and press  $\Rightarrow$ /OK to select.
4. Press  $\nabla$ / $\blacktriangle$  to scroll to **ANSWER DELAY**, and press  $\Rightarrow$ /OK to select.
5. Press  $\nabla$ / $\blacktriangle$  to select between **TIME SAVER**, **2 RINGS**, **4 RINGS**, **6 RINGS**, or **8 RINGS**. Press  $\Rightarrow$ /OK to save the settings and return to previous menu option.
  - Press C/⊗ to return to previous menu option without changing and saving.

## Set record time

Use this feature to set the message recording time.

1. Press  $\Rightarrow$ /OK when the phone is not in use.
2. Press  $\Rightarrow$ /OK to select **ANS. MACHINE**.
3. Press  $\nabla$ / $\blacktriangle$  to scroll to **TAM SETTINGS**, and press  $\Rightarrow$ /OK to select.
4. Press  $\nabla$ / $\blacktriangle$  to scroll to **RECORD TIME**, and press  $\Rightarrow$ /OK to select.
5. Press  $\nabla$ / $\blacktriangle$  to select between **60S**, **120S**, **180S**, or **UNLIMITED**.
  - Select and press  $\Rightarrow$ /OK to save the settings and back to previous

menu option.

- Select C/⊗ to return to previous menu option without changing and saving.

## Turn on/off the call screening

Use this feature to choose whether incoming messages can be heard while they are being recorded.

1. Press  $\Rightarrow$ /OK when the phone is not in use.
2. Press  $\Rightarrow$ /OK to select **ANS. MACHINE**.
3. Press  $\nabla$ / $\blacktriangle$  to scroll to **TAM SETTINGS** then press  $\Rightarrow$ /OK to select.
4. Press  $\nabla$ / $\blacktriangle$  to scroll to **BSSCREENING**, then press  $\Rightarrow$ /OK to select.
5. Press  $\nabla$ / $\blacktriangle$  to choose **ON** or **OFF**.
6. Press  $\Rightarrow$ /OK to save.
  - You hear a confirmation tone.

## Turn on/off remote access

You can turn on or off the remote access feature to access your messages.

1. Press  $\Rightarrow$ /OK when the phone is not in use.
2. Press  $\Rightarrow$ /OK to select **ANS. MACHINE**.
3. Press  $\nabla$ / $\blacktriangle$  to scroll to **TAM SETTINGS**, and then press  $\Rightarrow$ /OK to select.
4. Press  $\nabla$ / $\blacktriangle$  to scroll to **REMOTE ACC.**, and then press  $\Rightarrow$ /OK to select.
5. Press  $\nabla$ / $\blacktriangle$  to select **ON** or **OFF**.
6. Select and press  $\Rightarrow$ /OK to save.
  - You hear a confirmation tone.

## Change the remote access PIN

Make sure that Remote Access is turned on and then you can ring your phone from another tone-dialling phone to switch the answering machine on or off, and/or listen to your messages remotely. You can set your own remote access code. Default PIN is **0000**.

1. Press  $\Rightarrow$ /OK when the phone is not in use.
2. Press  $\Rightarrow$ /OK to select **ANS. MACHINE**.
3. Press  $\blacktriangledown$ / $\blacktriangle$  to scroll to **TAM SETTINGS**, and then press  $\Rightarrow$ /OK to select.
4. Press  $\blacktriangledown$ / $\blacktriangle$  to scroll to **CHANGE PIN**, and then press  $\Rightarrow$ /OK to select.
  - The display shows **OLD PIN?----**
  - Default PIN is **0000**.
5. Enter your current 4-digit remote access PIN.
  - The PIN is masked as  $\ast\ast\ast\ast$ .
6. Press  $\Rightarrow$ /OK to enter or C/ $\otimes$  to cancel.
  - If you entered the correct current remote access PIN, the display shows **NEW PIN?----**; - - - - cursor flashes.
7. Enter your preferred 4-digit new PIN.
  - The PIN is masked as  $\ast\ast\ast\ast$ .
  - The PIN must be 4-digit, otherwise, it will not proceed to confirmation page.
8. Re-enter the new PIN in confirm page. Press  $\Rightarrow$ /OK to save and confirm.
  - You hear a confirmation tone.

## General product care

### Taking care of your telephone

Your cordless telephone contains sophisticated electronic parts, so it must be treated with care.

### Avoid rough treatment

Place the handset down gently. Save the original packing materials to protect your telephone if you ever need to ship it.

### Avoid water

Your telephone can be damaged if it gets wet. Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower.

### Electrical storms

Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electrical appliances during storms.

### Cleaning your telephone

Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a dry non-abrasive cloth. Do not use dampened cloth or cleaning solvents of any kind.

## Storage

When you are not going to use the telephone for some time, unplug the adapter(s), and remove the rechargeable battery from the handset. Store the telephone base, the handset, the charger(s) and the adapter(s) in a cool and dry place.

## Frequently asked questions

Below are the questions most frequently asked about the cordless telephone. If you cannot find the answer to your question, visit our website at [www.vtechphones.eu](http://www.vtechphones.eu).

My telephone does not work at all.	Make sure the telephone base is installed properly, and battery is installed and charged correctly. For optimum daily performance, return the handset to the telephone base after use.
The display shows No line. I cannot hear the dial tone.	<p>Disconnect the telephone line cord from your telephone and connect it to another telephone. If there is no dial tone on that other telephone either, then the telephone line cord may be defective. Try installing a new telephone line cord.</p> <p>If changing the telephone line cord does not help, the wall jack (or the wiring to this wall jack) may be defective. Contact your telephone service provider.</p> <p>You may be using a new cable or VoIP service, the existing telephone jacks in your home may no longer work. Contact your service provider for solutions.</p>
I cannot dial out.	<p>Make sure there is a dial tone before dialing. It is normal if the handset takes a second or two to synchronize with the telephone base before producing a dial tone. Wait an extra second before dialing.</p> <p>Eliminate any background noise. Mute the handset before dialing, or dial from another room in your home with less background noise.</p>

Go to [www.vtechphones.eu](http://www.vtechphones.eu) (EU) for the latest VTech product news.



Specifications are subject to change without notice.

© 2023 VTech Communications, Inc.

All rights reserved. v2. 03/23

XS105x\_DE\_EN\_WEBCIB\_v2\_230315